

TOSHIBA

FILE NO. 030-9402


SERVICE MANUAL

FULL EDITION

C4E

COLOUR TELEVISION

1440RF

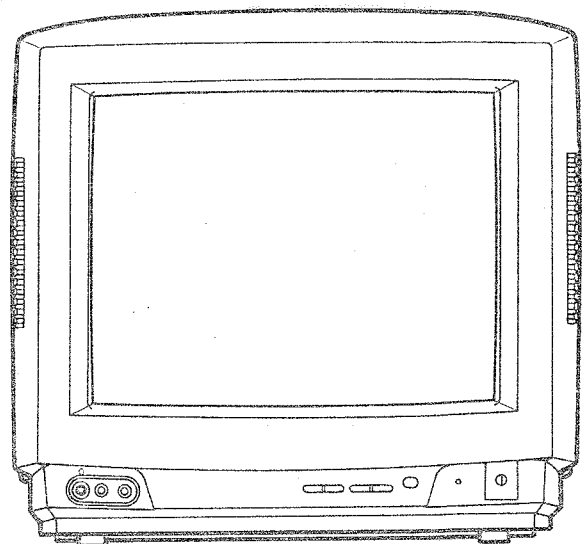

PRINTED IN JAPAN, Sep., 1994 (S)

SAFETY INSTRUCTIONS

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" INSTRUCTIONS BELOW.

X-RAY RADIATION PRECAUTION

1. The E.H.T. must be checked every time the receiver is serviced to ensure that the C.R.T. does not emit X-ray radiation as result of excessive E.H.T. voltage. The nominal E.H.T. for this receiver is 24.0 kV at zero beam current (minimum brightness) operating at 220V a.c. The maximum E.H.T. voltage permissible in any operating circumstances must not exceed 26.0 kV. When checking the E.H.T., use the 'High Voltage Check' procedure in this manual using an accurate E.H.T. voltmeter.
2. The only source of X-RAY radiation in this receiver is the C.R.T. To prevent X-ray radiation, the replacement C.R.T. must be identical to the original fitted as specified in the Parts List.
3. Some components used in this receiver have safety related characteristics preventing the C.R.T. from emitting X-ray radiation.
For continued safety, replacement component should only be made after referring the Product Safety Notice below.



SAFETY PRECAUTION

1. This receiver has a nominal working E.H.T. voltage of 22.5 kV. Extreme caution should be exercised when working on the receiver with the back removed.
Do not attempt to service this receiver if you are not conversant with the precautions and procedures for working on high voltage equipment.
When handling or working on the C.R.T., always discharge the anode to the receiver chassis before removing the anode cap
The C.R.T., if broken, will violently expel glass fragments. Use shatter proof goggles and take extreme care while handling.
Do not hold the C.R.T. by the neck as this is a very dangerous practice.
2. It is essential that to maintain the safety of the customer all cable forms be replaced exactly as supplied from factory.
3. A small part of the chassis used in this receiver is, when operating, at approximately half mains potential at all times. It is therefore essential in the interest of safety that when serving or connecting any test equipment the receiver should be supplied via a suitable isolating transformer of adequate rating.
4. Replace blown fuses within the receiver with the fuse specified in the parts list.
5. When replacing wires or components to terminals or tags, wind the leads around the terminal before soldering. When replacing safety components identified by the international hazard symbols on the circuit diagram and parts list, it must be a Toshiba approved type and must be mounted as the original.
6. Keep wires away from high temperature components.


PRODUCT SAFETY NOTICE

Many electrical and mechanical components in this chassis have special safety-related characteristics. These characteristics are often passed unnoticed by a visual inspection and the X-ray radiation protection afforded by them cannot necessarily be obtained by using replacements rated at higher voltages or wattage, etc. Components which have these special safety characteristics in this manual and its supplements are identified by the international hazard symbols on the schematic diagram and parts list. Before replacing any of these components read the parts list in this manual carefully. Substitute replacement components which do not have the same safety characteristics as specified in the parts list may create X-ray radiation.


FRONT CONTROLS AND REAR VIEWS

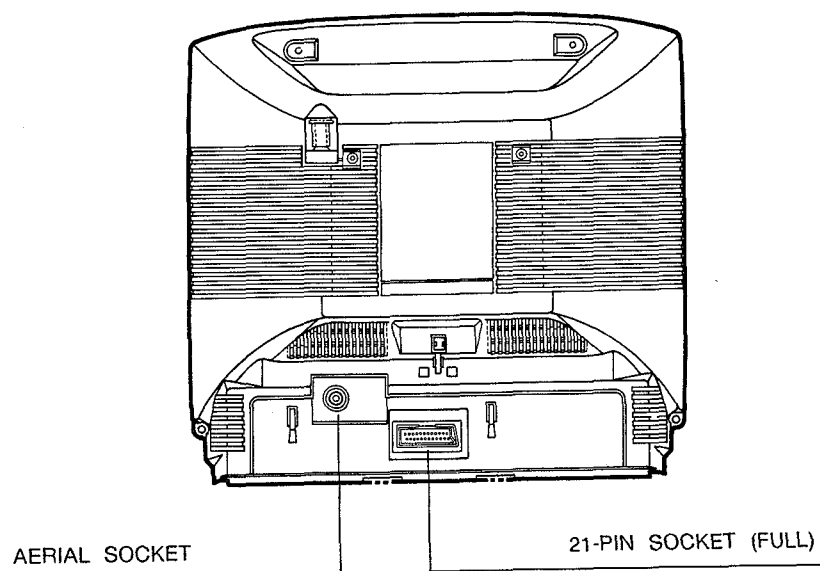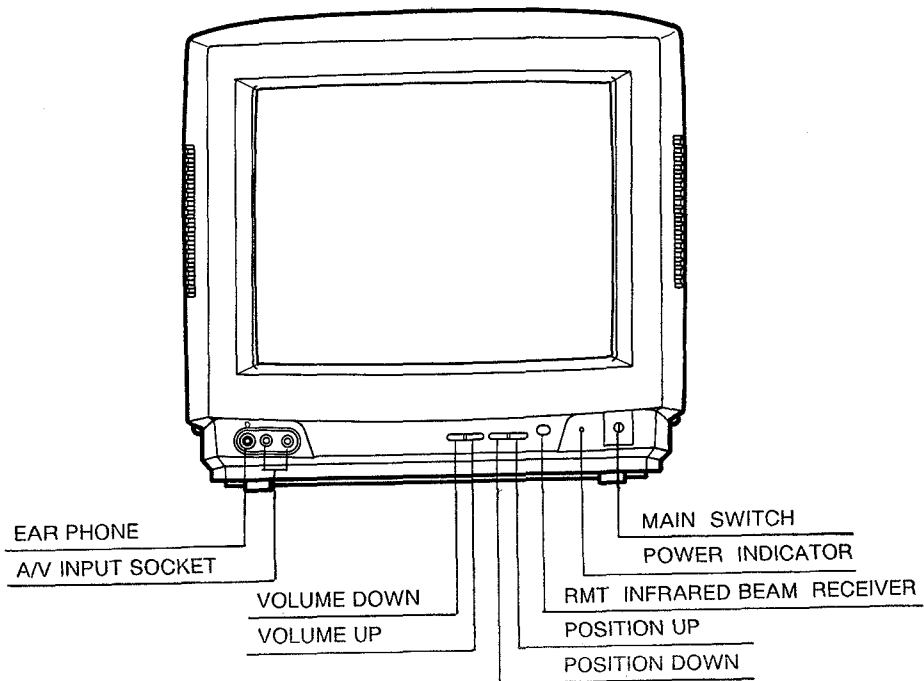

REMOTE HAND HELD UNIT

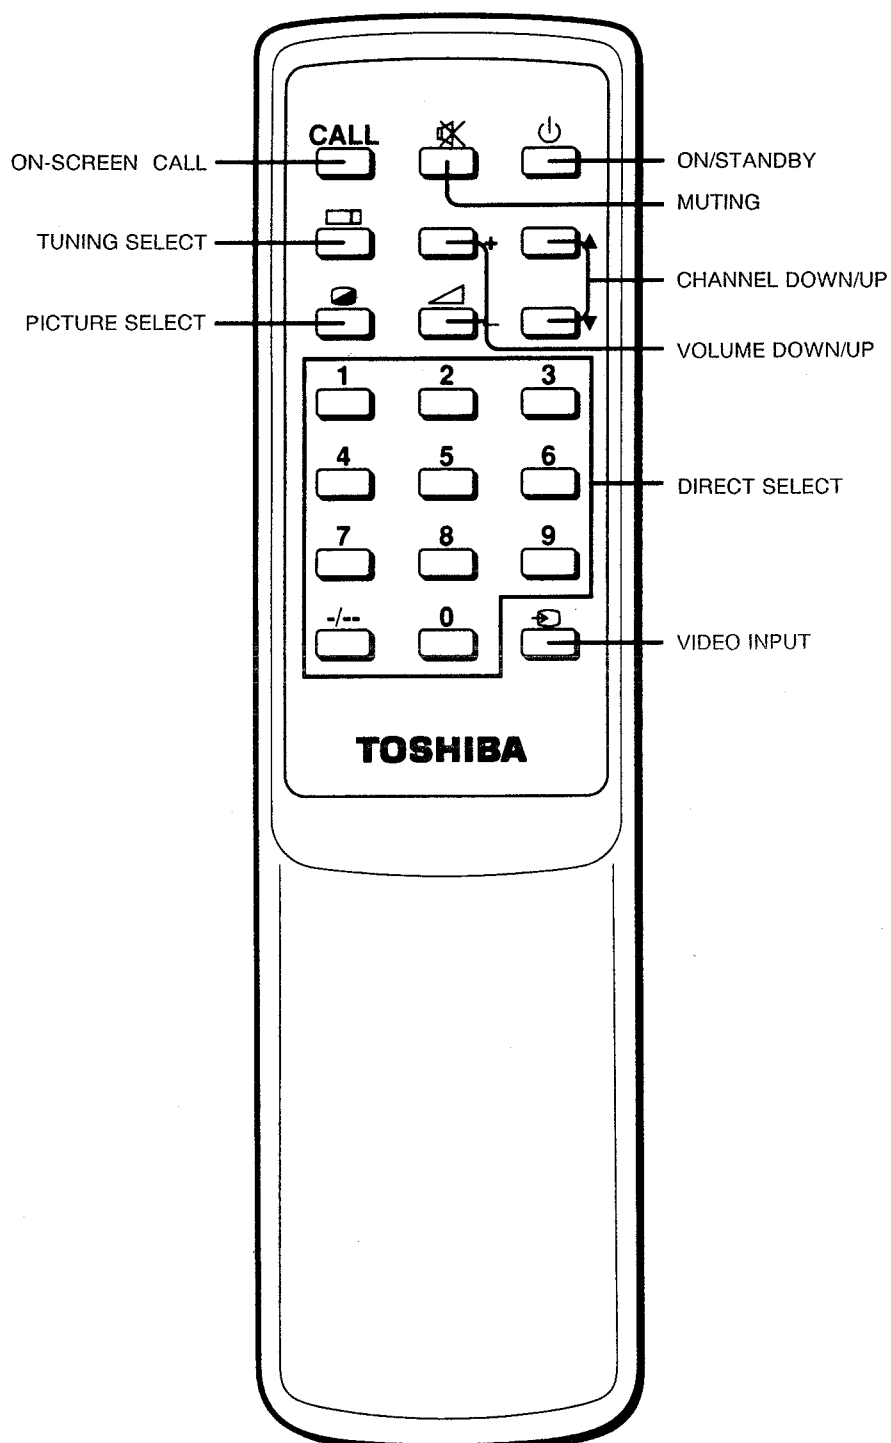

CIRCUIT BLOCK DIAGRAM

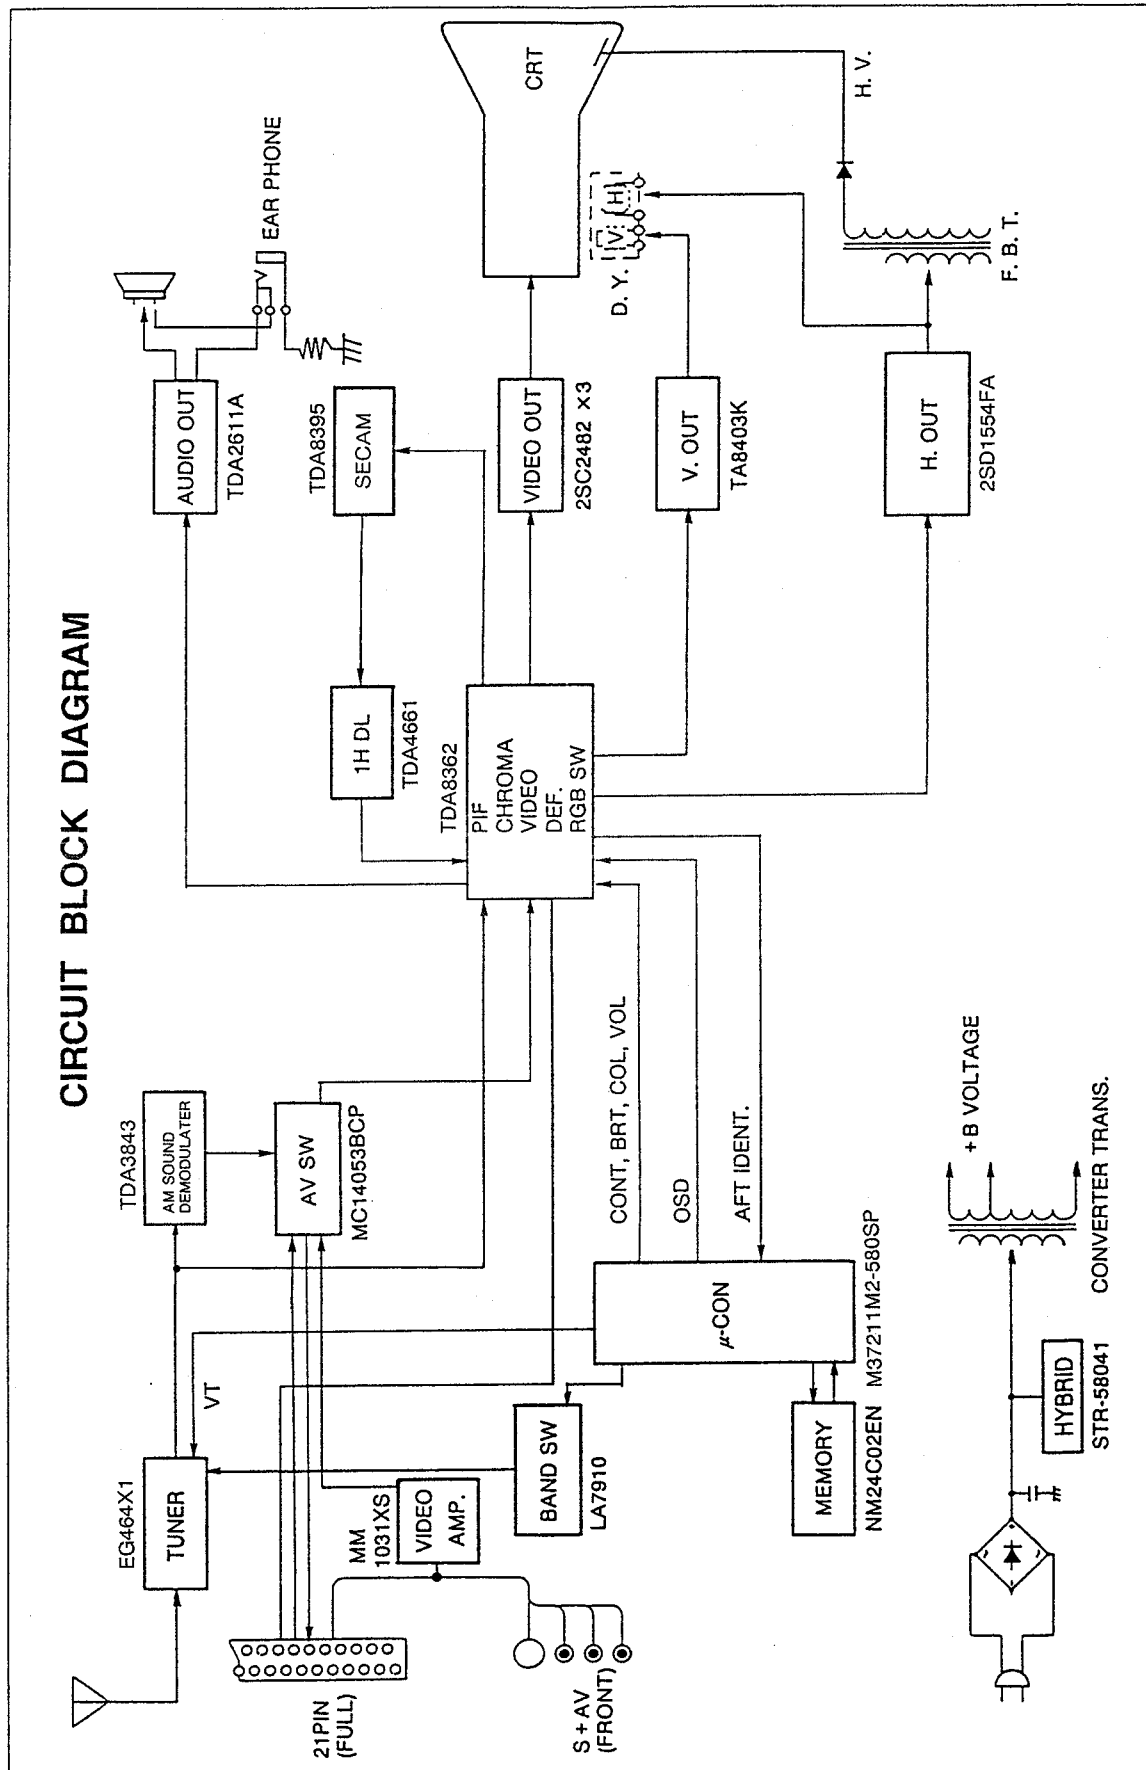

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 2 OF THIS MANUAL.

INSTALLATION AND SERVICE ADJUSTMENTS

GENERAL INFORMATION

All adjustments are thoroughly checked and corrected when the receiver leaves the factory. Therefore the receiver should operate normally and produce proper colour and B/W pictures upon installation. However, several minor adjustments may be required depending on the particular location in which the receiver is operated.

This receiver is shipped completely in cardboard carton. Carefully draw out the receiver from the carton and remove all packing materials.

Plug the power cord into a convenient 220 volts 50 Hz AC two pin power outlet. Turn the receiver ON. Check and adjust all the customer controls such as BRIGHTNESS, CONTRAST and COLOUR Controls to obtain natural colour or B/W picture.

AUTOMATIC DEGAUSSING

A degaussing coil is mounted around the picture tube so that external degaussing after moving the receiver is normally unnecessary, providing the receiver is properly degaussed upon installation. The degaussing coil operates for about 1 second after the power to the receiver is switched ON. If the set is moved or faced in a different direction, the power switch must be switched off at least 30 minutes in order that the automatic degaussing circuit operates properly. Should the chassis or parts of the cabinet become magnetized to cause poor colour purity, use an external degaussing coil. Slowly move the degaussing coil around the faceplate of the picture tube, the sides and front of the receiver and slowly withdraw the coil to a distance of about 2 m before disconnecting it from AC source. If colour shading still persists, perform the COLOUR PURITY ADJUSTMENT and CONVERGENCE ADJUSTMENTS procedures.

HIGH VOLTAGE CHECK

CAUTION: There is no HIGH VOLTAGE ADJUSTMENT on this chassis.


1. Connect an accurate high voltage meter to the second anode of the picture tube.
2. Turn on the receiver. Set the BRIGHTNESS and CONTRAST Controls to minimum (zero beam current).
3. High voltage will be measured below 26.0 kV.
4. Rotate the BRIGHTNESS Control to both extremes to be sure the high voltage does not exceed the limit of 26.0 kV under any conditions.

HEIGHT ADJUSTMENT

1. Receive the WG PHILIPS pattern, and set the contrast and colour to minimum, and the brightness to centre.
2. Adjust HEIGHT Control (R351) so that white blocks at top and bottom of the picture are just masked.

HORIZONTAL CENTRE ADJUSTMENT

1. Receive the WG PHILIPS pattern.
2. Set the contrast and colour to minimum, and the brightness to centre.
3. Adjust H. CENTER SUB Control (R451) so the pattern can be located for d-c to be + 4.0 mm.

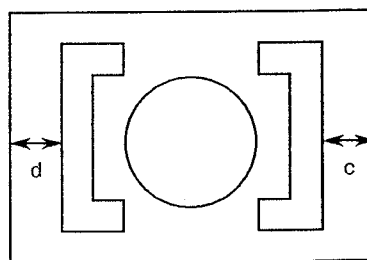

FOCUS ADJUSTMENT

Adjust FOCUS Control on FLYBACK TRANS. (T461) for well defined scanning lines in the centre area on the screen.

DELAYED R-F AGC ADJUSTMENT

1. Tune the set in the strongest station in your area.
2. Turn AGC DELAY Control (R151) on MAIN Board to fully counterclockwise position.
3. Adjust AGC DELAY Control clockwise until noise (snow) disappears on the screen.

CRT GREY SCALE ADJUSTMENT

1. Press VIDEO INPUT button on Remote Control unit to turn TV to video input mode. (Video input should have no signal.) Next press PICTURE SELECT button to select function and set CONTRAST to minimum, BRIGHTNESS to maximum, COLOUR to minimum.
2. Turn the SCREEN Control (on T461) fully counter-clockwise.
3. Set the RED, GREEN and BLUE CUT OFF Controls (R557, R558, R559) counterclockwise to the centre position.
4. Set the CUT OFF SW. (S202) in the H. line position.
5. Set the SUB BRIGHTNESS Control to minimum.
6. Rotate the SCREEN Control gradually clockwise until the first horizontal line of a colour (RED, GREEN or BLUE) appears slightly on the screen. Set the SCREEN Control to this position.
7. Adjust the CUT OFF Controls to obtain the slightly lighted horizontal lines in the same levels of three colours (RED, GREEN and BLUE).
The lines may look like white if the CUT OFF Controls are adjusted properly.
8. Return the CUT OFF SW. (S202) in the receiving position. Press VIDEO INPUT button to turn TV to the TV mode.
9. Set the BRIGHTNESS Control to the maximum and COLOUR Control to the centre.
10. Set the BRIGHTNESS and CONTRAST Controls to obtain dark grey raster. Then check the white balance in low brightness. If the white balance is not proper, retouch the CUT OFF Controls to obtain a good white balance in both low and high light areas.

SUB-BRIGHTNESS ADJUSTMENT

1. Tune in a colour programme of Philips pattern.
2. Set the CONTRAST Control to the minimum and the BRIGHTNESS Control to the centre.
3. Set the COLOUR Control to the minimum.
4. Set the SUB-BRIGHT. Control (R551) so that the voltage across terminals Y-Z can be $0.2 \pm 0.05V$ with voltmeter and leave the receiver for five minutes in this state.
5. Watching the picture well, adjust the SUB-BRIGHT. Control in the position where the picture does not show evidence of blooming in high bright area and not appear too dark in low bright portion.
6. Check the proper picture variation by rotating the CONTRAST and BRIGHTNESS Controls to both extremes.
7. If the picture does not appear dark with the CONTRAST and BRIGHTNESS Controls turned to the minimum, or not appear bright with the controls turned to the maximum, adjust the SUB-BRIGHT. Control again for the acceptable picture.

PICTURE I-F ALIGNMENT

GENERAL..... Refer to figure 4 for test equipment connection.
 PRELIMINARY STEPS Supply +5 volts to the 5V-1 line.
 SIGNAL GENERATOR..... Connect to both leads of R101 with signal level of 75 dB μ , and open the solder-link at IF OUT of tuner on the Main Board. (See figure 4.)
 DVM..... Connect to pin #44 of IC501 on the Main Board through the detector.

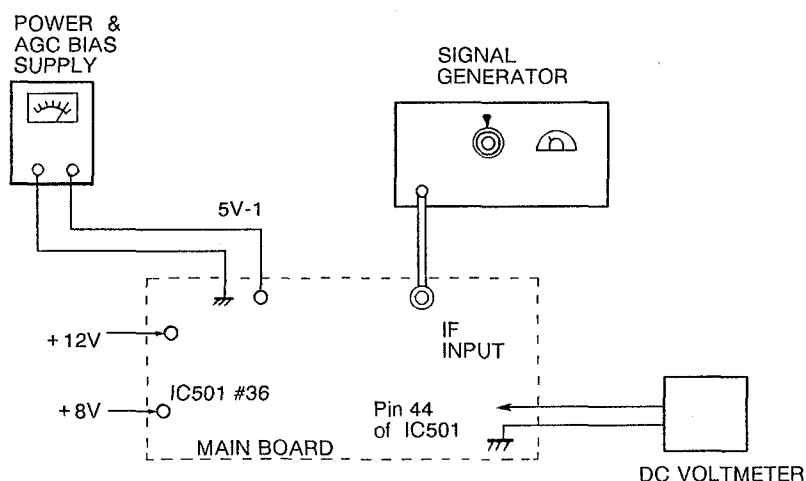



Figure 4. Picture IF Alignment

STEP	SIGNAL GENERATOR	ADJUST	REMARKS
1. Detector Coil	38.9 MHz CARRIER WAVE (Level 75 dB μ)	T103	1. Supply external DC power (+5V) to 5V-1 line. 2. Supply +8V to pin 36 of IC501. 3. Supply external DC power to +12V line. 4. Apply test signal to IF input. 5. Short pin 30 of ICA01 to ground. 6. Open pin 30 of ICA01. 7. Adjust T103 so that DC voltage at pin 44 of IC501 becomes 3.5V \pm 0.5V.
2. Detector Capacitor	34.47 MHz CARRIER WAVE (Level 75 dB μ)	C152	1. Supply external DC power to 5V-1 line. 2. Supply +8V to pin 36 of IC501. 3. Supply external DC power to +12V line. 4. Apply test signal to IF input. 5. Short pin 30 of ICA01 to ground. 6. Open pin 30 of ICA01. 7. Short base of Q109 to ground. 8. Adjust C152 so that DC voltage at pin 44 of IC501 becomes 1.0 \pm 0.5V.
After completing the above steps, disconnect the equipment and re-solder the links on the Main Board, and adjust the AGC Delay Control (R151) following DELAYED RF AGC ADJUSTMENTS.			


1440 SERIES : SERVICE POSITION INFORMATION

When repairing the units of 1440 Series, make sure to retain the chassis in the following procedure.


1. Open the hook at the left of the rail (A218) retaining the chassis with finger to release the lock, and pull the chassis to your side.

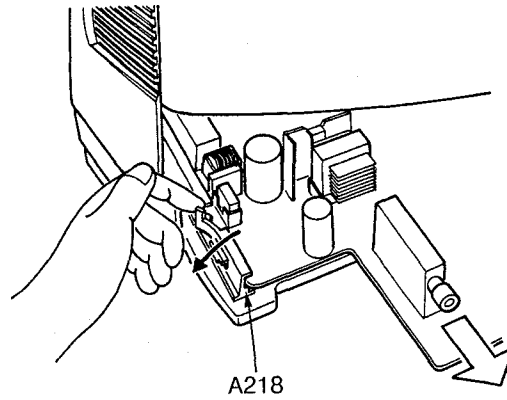


2. Remove the connector of the DG (degausser) coil from the main p.c. board.

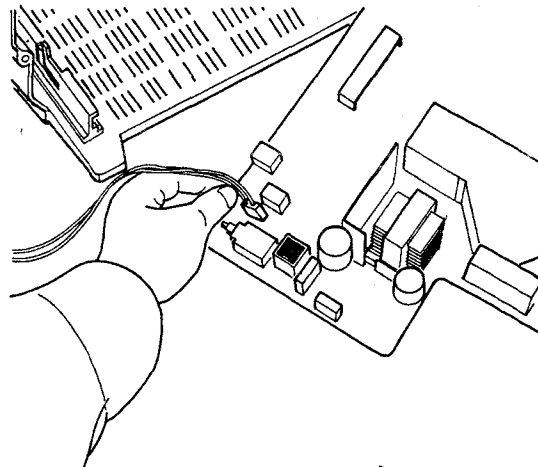

3. Peel the holding tape off the speaker leads.


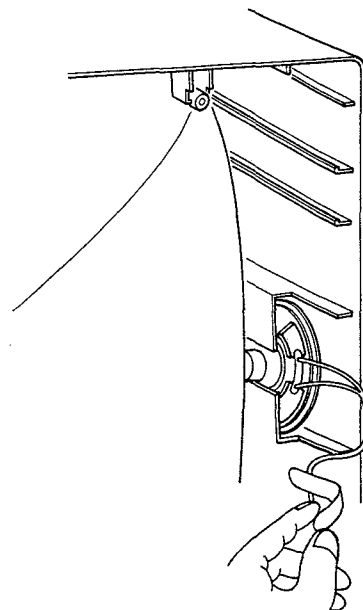


4. Insert the right edge of the main p.c. board into the U-rib ("a" in the sketch) located under the anchoring boss of the back cover at the upper right side, and fix it to the rib ("b") located on the extension line of the p.c. board rail at the bottom right.

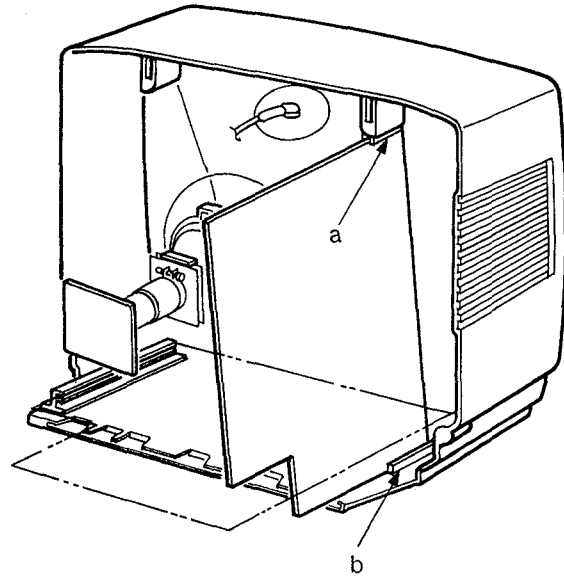

5. After completion of the repair works, reverse the above procedure to restore it.

CABINET REPLACEMENT PARTS LIST

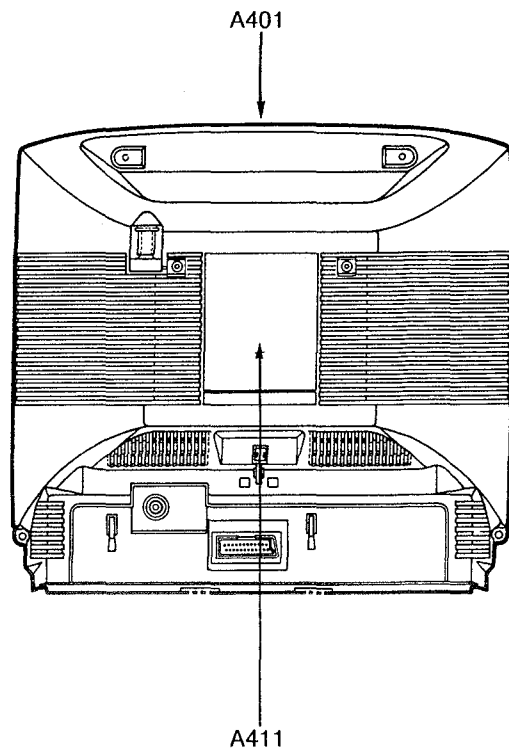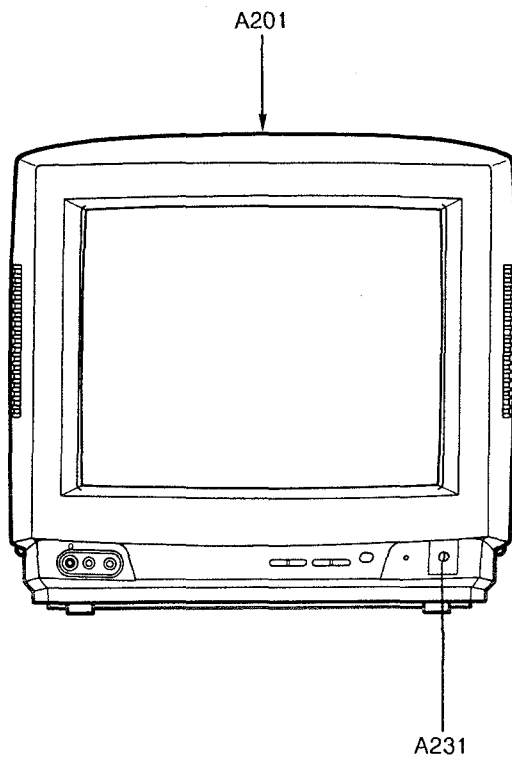

Location No.	Part No.	Description
A201	23410303	Front Cover
A218	23421601	Rail, Left (Refer to page 9.)
A231	23443832	Button, POWER
△ A401	23425821	Back Cover
A411	23569064	Label, Model No., B/C

CHASSIS REPLACEMENT PARTS LIST

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 2 OF THIS MANUAL.

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 2. Do not degrade the safety of the receiver through improper servicing.

NOTICE: The part number must be used when ordering parts, in order to assist in processing, be sure to include the Model number and Description.

ABBREVIATIONS:

Capacitors.....	CD : Ceramic Disk	PF : Plastic Film	EL : Electrolytic
Resistors.....	CF : Carbon Film	CC : Carbon Composition	MF : Metal Film
	OMF : Oxide Metal Film	VR : Variable Resistor	FR : Fusible Resistor

(All CD and PF capacitors are $\pm 5\%$, 50V and all resistors, $\pm 5\%$, 1/6W unless otherwise noted.)

Location No.	Part No.	Description
CAPACITORS		
C101	24232103	CD, 0.01 μ F, +80%, -20%
C102	24232103	CD, 0.01 μ F, +80%, -20%
C103	24232103	CD, 0.01 μ F, +80%, -20%
C104	24232103	CD, 0.01 μ F, +80%, -20%
C105	24232103	CD, 0.01 μ F, +80%, -20%
C106	24232103	CD, 0.01 μ F, +80%, -20%
C107	24794102	EL, 1000 μ F, $\pm 20\%$, 16V
C108	24232103	CD, 0.01 μ F, +80%, -20%
C118	24474102	CD, 1000pF, $\pm 10\%$
C119	24474102	CD, 1000pF, $\pm 10\%$
C120	24232103	CD, 0.01 μ F, +80%, -20%
C121	24474102	CD, 1000pF, $\pm 10\%$
C122	24232103	CD, 0.01 μ F, +80%, -20%
C123	24474102	CD, 1000pF, $\pm 10\%$
C125	24796479	EL, 4.7 μ F, $\pm 20\%$, 35V
C126	24794100	EL, 10 μ F, $\pm 20\%$, 16V
C127	24206229	EL, 2.2 μ F, 50V
C128	24232103	CD, 0.01 μ F, +80%, -20%
C129	24793220	EL, 22 μ F, $\pm 20\%$, 10V
C131	24538474	PF, 0.47 μ F
C132	24474102	CD, 1000pF, $\pm 10\%$
C133	24474101	CD, 100pF, $\pm 10\%$
C134	24590104	PF, 0.1 μ F
C135	24794470	EL, 47 μ F, $\pm 20\%$, 16V
C136	24232103	CD, 0.01 μ F, +80%, -20%
C138	24206229	EL, 2.2 μ F, 50V
C141	24232103	CD, 0.01 μ F, +80%, -20%
C142	24794100	EL, 10 μ F, $\pm 20\%$, 16V
C143	24232103	CD, 0.01 μ F, +80%, -20%
C144	24206229	EL, 2.2 μ F, 50V
C145	24353120	CD, 12pF
C146	24353150	CD, 15pF
C148	24232103	CD, 0.01 μ F, +80%, -20%
C149	24232103	CD, 0.01 μ F, +80%, -20%
C152	24093983	Variable Capacitor, 2.7pF to 10pF, 100V
C160	24232103	CD, 0.01 μ F, +80%, -20%
C161	24793101	EL, 100 μ F, $\pm 20\%$, 10V
C162	24473560	CD, 56pF
C163	24473560	CD, 56pF

Location No.	Part No.	Description
C165	24794222	EL, 2200 μ F, $\pm 20\%$, 16V
C166	24232103	CD, 0.01 μ F, +80%, -20%
C167	24232103	CD, 0.01 μ F, +80%, -20%
C168	24232103	CD, 0.01 μ F, +80%, -20%
C190	24232103	CD, 0.01 μ F, +80%, -20%
C193	24797229	EL, 2.2 μ F, $\pm 20\%$, 50V
C201	24590473	PF, 0.047 μ F
C202	24590473	PF, 0.047 μ F
C203	24794100	EL, 10 μ F, $\pm 20\%$, 16V
C205	24794220	EL, 22 μ F, $\pm 20\%$, 16V
C240	24538474	PF, 0.47 μ F
C302	24474101	CD, 100pF, $\pm 10\%$
C303	24590104	PF, 0.1 μ F
C304	24212472	CD, 4700pF, $\pm 10\%$
C306	24212391	CD, 390pF, $\pm 10\%$
C312	24590823	PF, 0.082 μ F
C313	24668101	EL, 100 μ F, $\pm 20\%$, 35V
C314	24214102	CD, 1000pF, $\pm 10\%$, 500V
C315	24214221	CD, 220pF, $\pm 10\%$, 500V
C317	24617915	EL, 1 μ F, $\pm 10\%$, 50V
C318	24666472	EL, 4700 μ F, $\pm 20\%$, 16V
C323	24082049	PF, 0.047 μ F, 100V
C325	24668101	EL, 100 μ F, $\pm 20\%$, 35V
C331	24668102	EL, 1000 μ F, $\pm 20\%$, 35V
C332	24082057	PF, 0.22 μ F, 100V
C341	24666101	EL, 100 μ F, $\pm 20\%$, 16V
C403	24206010	EL, 1 μ F, 50V
C406	24590472	PF, 4700pF
C407	24590472	PF, 4700pF
C408	24666331	EL, 330 μ F, $\pm 20\%$, 16V
C409	24232103	CD, 0.01 μ F, +80%, -20%
C410	24082261	PF, 5600pF, 100V
C411	24212101	CD, 100pF, $\pm 10\%$
C412	24214332	CD, 3300pF, $\pm 10\%$, 500V
C413	24590223	PF, 0.022 μ F
C416	24214271	CD, 270pF, $\pm 10\%$, 500V
△C440	24082347	PF, 6700pF, $\pm 3\%$, 1500V
C441	24214221	CD, 220pF, $\pm 10\%$, 500V
C442	24095753	PF, 0.39 μ F, 200V
C443	24214221	CD, 220pF, $\pm 10\%$, 500V
C445	24095903	PF, 0.056 μ F, $\pm 10\%$, 250V

Location No.	Part No.	Description
C446	24666471	EL, 470 μ F, \pm 20%, 16V
C447	24679479	EL, 4.7 μ F, \pm 20%, 250V
C448	24640908	EL, 33 μ F, \pm 20%, 160V
C449	24667102	EL, 1000 μ F, \pm 20%, 25V
△C463	24212222	CD, 2200pF, \pm 10%
C470	24666220	EL, 22 μ F, \pm 20%, 16V
C471	24538474	PF, 0.47 μ F
C480	24538474	PF, 0.47 μ F
C481	24666101	EL, 100 μ F, \pm 20%, 16V
C501	24590104	PF, 0.1 μ F
C502	24538474	PF, 0.47 μ F
C503	24794221	EL, 220 μ F, \pm 20%, 16V
C504	24538474	PF, 0.47 μ F
C505	24794100	EL, 10 μ F, \pm 20%, 16V
C506	24473680	CD, 68pF
C507	24473680	CD, 68pF
C508	24473680	CD, 68pF
C509	24797100	EL, 10 μ F, \pm 20%, 50V
C511	24590104	PF, 0.1 μ F
C512	24590104	PF, 0.1 μ F
C513	24590104	PF, 0.1 μ F
C514	24590472	PF, 4700pF
C516	24212561	CD, 560pF, \pm 10%
C517	24794470	EL, 47 μ F, \pm 20%, 16V
C518	24590473	PF, 0.047 μ F
C520	24590102	PF, 1000pF
C521	24590102	PF, 1000pF
C531	24436241	CD, 240pF
C532	24436241	CD, 240pF
C533	24212271	CD, 270pF, \pm 10%
C534	24794471	EL, 470 μ F, \pm 20%, 16V
C536	24797479	EL, 4.7 μ F, \pm 20%, 50V
C601	24795471	EL, 470 μ F, \pm 20%, 25V
C602	24590104	PF, 0.1 μ F
C603	24795221	EL, 220 μ F, \pm 20%, 25V
C605	24206010	EL, 1 μ F, 50V
C606	24795220	EL, 22 μ F, \pm 20%, 25V
C607	24590682	PF, 6800pF
C608	24797010	EL, 1 μ F, \pm 20%, 50V
C609	24794470	EL, 47 μ F, \pm 20%, 16V
C610	24206010	EL, 1 μ F, 50V
C611	24212271	CD, 270pF, \pm 10%
C612	24212102	CD, 1000pF, \pm 10%
C613	24206010	EL, 1 μ F, 50V
C616	24797100	EL, 10 μ F, \pm 20%, 50V
C617	24206010	EL, 1 μ F, 50V
C618	24797470	EL, 47 μ F, \pm 20%, 50V
C619	24590332	PF, 3300pF
C620	24797229	EL, 2.2 μ F, \pm 20%, 50V
C622	24797010	EL, 1 μ F, \pm 20%, 50V
△C801	24082363	PF, 0.22 μ F, \pm 20%, AC250V
△C802	24094656	CD, 2200pF, \pm 20%, AC400V
△C803	24094656	CD, 2200pF, \pm 20%, AC400V
C807	24092281	CD, 4700pF, \pm 20%, AC250V
C808	24092281	CD, 4700pF, \pm 20%, AC250V
C809	24086871	EL, 120 μ F, \pm 20%, 400V
C812	24092341	CD, 470pF, \pm 10%, 2kV
C813	24095931	PF, 2200pF, 1250V
C814	24590223	PF, 0.022 μ F
C815	24590182	PF, 1800pF
C816	24666470	EL, 47 μ F, \pm 20%, 16V
C817	24676220	EL, 22 μ F, \pm 20%, 100V
C818	24214471	CD, 470pF, \pm 10%, 500V
C819	24214471	CD, 470pF, \pm 10%, 500V

Location No.	Part No.	Description
C820	24794470	EL, 47 μ F, \pm 20%, 16V
C828	24212101	CD, 100pF, \pm 10%
C829	24795471	EL, 470 μ F, \pm 20%, 25V
C830	24092337	CD, 220pF, \pm 10%, 2kV
C831	24640932	EL, 100 μ F, \pm 20%, 160V
C835	24797479	EL, 4.7 μ F, \pm 20%, 50V
C836	24797100	EL, 10 μ F, \pm 20%, 50V
C837	24797100	EL, 10 μ F, \pm 20%, 50V
C838	24538474	PF, 0.47 μ F
C849	24214471	CD, 470pF, \pm 10%, 500V
C901	24700100	EL, 10 μ F, \pm 20%, 250V
C902	24095931	PF, 2200pF, 1250V
CA01	24474101	CD, 100pF, \pm 10%
CA14	24232103	CD, 0.01 μ F, +80%, -20%
CA15	24794100	EL, 10 μ F, \pm 20%, 16V
CA18	24232103	CD, 0.01 μ F, +80%, -20%
CA19	24794470	EL, 47 μ F, \pm 20%, 16V
CA20	24474101	CD, 100pF, \pm 10%
CA21	24435470	CD, 47pF, 500V
CA37	24590104	PF, 0.1 μ F
CA39	24474391	CD, 390pF, \pm 10%
CA40	24212221	CD, 220pF, \pm 10%
CA42	24590104	PF, 0.1 μ F
CA43	24590104	PF, 0.1 μ F
CA45	24474101	CD, 100pF, \pm 10%
CA99	24232103	CD, 0.01 μ F, +80%, -20%
CM01	24794470	EL, 47 μ F, \pm 20%, 16V
CM02	24590223	PF, 0.022 μ F
CM03	24590104	PF, 0.1 μ F
CM04	24538224	PF, 0.22 μ F
CN02	24794101	EL, 100 μ F, \pm 20%, 16V
CN03	24794100	EL, 10 μ F, \pm 20%, 16V
CV01	24794101	EL, 100 μ F, \pm 20%, 16V
CV02	24793471	EL, 470 μ F, \pm 20%, 10V
CX08	24590104	PF, 0.1 μ F
CX09	24590104	PF, 0.1 μ F
CX10	24590104	PF, 0.1 μ F
RESISTORS		
R101	24366101	CF, 100 ohm
R102	24366103	CF, 10k ohm
R103	24366103	CF, 10k ohm
R104	24366392	CF, 3900 ohm
R105	24366103	CF, 10k ohm
R106	24366680	CF, 68 ohm
R112	24366123	CF, 12k ohm
R125	24366102	CF, 1k ohm
R126	24366562	CF, 5600 ohm
R127	24366102	CF, 1k ohm
R128	24366360	CF, 36 ohm
R129	24366472	CF, 4700 ohm
R130	24366101	CF, 100 ohm
R131	24366222	CF, 2200 ohm
R132	24366101	CF, 100 ohm
R133	24366222	CF, 2200 ohm
R135	24366682	CF, 6800 ohm
R136	24366122	CF, 1200 ohm
R137	24366681	CF, 680 ohm
R138	24366360	CF, 36 ohm
R140	24366104	CF, 100k ohm
R141	24366822	CF, 8200 ohm
R142	24366223	CF, 22k ohm
R143	24366122	CF, 1200 ohm
R145	24366183	CF, 18k ohm

Location No.	Part No.	Description
R151	24066926	VR, 10k ohm, 1/10W
R161	24366183	CF, 18k ohm
R162	24366681	CF, 680 ohm
R163	24366682	CF, 6800 ohm
R164	24366332	CF, 3300 ohm
R165	24366512	CF, 5100 ohm
R166	24366332	CF, 3300 ohm
R167	24366101	CF, 100 ohm
R168	24366102	CF, 1k ohm
R169	24366102	CF, 1k ohm
R170	24366183	CF, 18k ohm
R171	24366153	CF, 15k ohm
R172	24366101	CF, 100 ohm
R173	24366271	CF, 270 ohm
R174	24366392	CF, 3900 ohm
R175	24366471	CF, 470 ohm
R176	24366153	CF, 15k ohm
R177	24366101	CF, 100 ohm
R178	24366102	CF, 1k ohm
R179	24366391	CF, 390 ohm
R180	24366331	CF, 330 ohm
R181	24366560	CF, 56 ohm
R182	24366820	CF, 82 ohm
R183	24366101	CF, 100 ohm
R185	24366101	CF, 100 ohm
R186	24366471	CF, 470 ohm
R187	24366223	CF, 22k ohm
R188	24366223	CF, 22k ohm
R189	24366102	CF, 1k ohm
R191	24942226	CC, 22M ohm, 1/2W
R201	24366621	CF, 620 ohm
R203	24366473	CF, 47k ohm
R204	24366393	CF, 39k ohm
R205	24366274	CF, 270k ohm
R206	24366103	CF, 10k ohm
R207	24366103	CF, 10k ohm
R211	24366153	CF, 15k ohm
R212	24366183	CF, 18k ohm
R213	24366681	CF, 680 ohm
R215	24366681	CF, 680 ohm
R240	24366183	CF, 18k ohm
R241	24366223	CF, 22k ohm
R299	24366683	CF, 68k ohm
R301	24366155	CF, 1.5M ohm
R302	24366474	CF, 470k ohm
R304	24366102	CF, 1k ohm
R311	24366101	CF, 100 ohm
R316	24366102	CF, 1k ohm
R317	24366563	CF, 56k ohm
R318	24366433	CF, 43k ohm
R319	24552272	OMF, 2700 ohm, 1/2W
R320	24383271	OMF, 270 ohm, 2W
R321	24366133	CF, 13k ohm
R322	24366104	CF, 100k ohm
R323	24322119	OMF, 1.1 ohm, 1W
R325	24366183	CF, 18k ohm
△ R327	24339569	OMF, 5.6 ohm, 2W
R330	24321109	OMF, 1 ohm, 1/2W
R333	24366222	CF, 2200 ohm
R340	24366473	CF, 47k ohm
R341	24366182	CF, 1800 ohm
R342	24366562	CF, 5600 ohm
R343	24310189	OMF, 1.8 ohm, 1/2W
R344	24366392	CF, 3900 ohm

Location No.	Part No.	Description
R351	24066606	VR, 1M ohm, 1/10W
R401	24366182	CF, 1800 ohm
R403	24366153	CF, 15k ohm
R407	24366222	CF, 2200 ohm
R409	24366564	CF, 560k ohm
R410	24552472	OMF, 4700 ohm, 1/2W
R411	24366561	CF, 560 ohm
R412	24366103	CF, 10k ohm
R413	24366331	CF, 330 ohm
R416	24510182	Cement, 1800 ohm, 5W
R422	24366273	CF, 27k ohm
R440	24366103	CF, 10k ohm
R441	24366103	CF, 10k ohm
△ R444	24338398	OMF, 0.39 ohm, 1W
R445	24552330	OMF, 33 ohm, 1/2W
R446	24383331	OMF, 330 ohm, 2W
△ R448	24338338	OMF, 0.33 ohm, 1W
R451	24066600	VR, 10k ohm, 1/10W
R470	24338828	OMF, 0.82 ohm, 1W
R471	24552101	OMF, 100 ohm, 1/2W
R472	24376393	CF, 39k ohm, 1/2W
R474	24366331	CF, 330 ohm
R475	24366102	CF, 1k ohm
R477	24366203	CF, 20k ohm
R480	24546479	FR, 4.7 ohm, 1/2W
R501	24366332	CF, 3300 ohm
R502	24366472	CF, 4700 ohm
R503	24366221	CF, 220 ohm
R504	24366221	CF, 220 ohm
R505	24366221	CF, 220 ohm
R506	24366183	CF, 18k ohm
R508	24366183	CF, 18k ohm
R509	24366683	CF, 68k ohm
R510	24366153	CF, 15k ohm
R512	24366104	CF, 100k ohm
R513	24366473	CF, 47k ohm
R514	24552221	OMF, 220 ohm, 1/2W
R521	24366102	CF, 1k ohm
R523	24366102	CF, 1k ohm
R525	24366102	CF, 1k ohm
R528	24366511	CF, 510 ohm
R529	24366182	CF, 1800 ohm
R530	24366472	CF, 4700 ohm
R531	24366472	CF, 4700 ohm
R532	24366561	CF, 560 ohm
R533	24366681	CF, 680 ohm
R534	24366681	CF, 680 ohm
R535	24366681	CF, 680 ohm
R536	24366122	CF, 1200 ohm
R537	24366122	CF, 1200 ohm
R538	24366122	CF, 1200 ohm
R547	24552820	OMF, 82 ohm, 1/2W
R548	24366101	CF, 100 ohm
R551	24066600	VR, 10k ohm, 1/10W
R557	24066600	VR, 10k ohm, 1/10W
R558	24066600	VR, 10k ohm, 1/10W
R559	24066600	VR, 10k ohm, 1/10W
R561	24366270	CF, 27 ohm
R562	24366270	CF, 27 ohm
R563	24366270	CF, 27 ohm
R564	24366152	CF, 1500 ohm
R565	24366112	CF, 1100 ohm
R566	24366511	CF, 510 ohm
R567	24366511	CF, 510 ohm

Location No.	Part No.	Description
R591	24382183	OMF, 18k ohm, 1W
R592	24382183	OMF, 18k ohm, 1W
R593	24382183	OMF, 18k ohm, 1W
R601	24366339	CF, 3.3 ohm
R602	24366123	CF, 12k ohm
R603	24366182	CF, 1800 ohm
R604	24366103	CF, 10k ohm
R605	24552331	OMF, 330 ohm, 1/2W
R607	24366103	CF, 10k ohm
R614	24366102	CF, 1k ohm
R615	24366102	CF, 1k ohm
R616	24366102	CF, 1k ohm
R617	24366104	CF, 100k ohm
R618	24366153	CF, 15k ohm
R621	24366222	CF, 2200 ohm
R622	24366682	CF, 6800 ohm
R623	24366682	CF, 6800 ohm
R624	24366681	CF, 680 ohm
R625	24366104	CF, 100k ohm
R626	24366103	CF, 10k ohm
R627	24366153	CF, 15k ohm
R628	24366104	CF, 100k ohm
R629	24366153	CF, 15k ohm
R630	24366392	CF, 3900 ohm
R631	24366103	CF, 10k ohm
R632	24366273	CF, 27k ohm
R633	24366153	CF, 15k ohm
R638	24366102	CF, 1k ohm
R639	24366683	CF, 68k ohm
R641	24366103	CF, 10k ohm
R642	24366153	CF, 15k ohm
R643	24366203	CF, 20k ohm
R644	24366332	CF, 3300 ohm
R645	24366204	CF, 200k ohm
△ R801	24009954	Metal-Glazed Resistor, 2.2M ohm, 1/2W
R803	24366824	CF, 820k ohm
R804	24366561	CF, 560 ohm
R805	24377394	CF, 390k ohm, 1W
R806	24383470	OMF, 47 ohm, 2W
R807	24383330	OMF, 33 ohm, 2W
△ R808	24531100	FR, 10 ohm, 1/2W
R809	24366561	CF, 560 ohm
R810	24366561	CF, 560 ohm
R811	24322278	OMF, 0.27 ohm, 1W
R812	24366470	CF, 47 ohm
R813	24366561	CF, 560 ohm
R814	24366102	CF, 1k ohm
R815	24366561	CF, 560 ohm
R816	24366103	CF, 10k ohm
R817	24366102	CF, 1k ohm
R818	24366102	CF, 1k ohm
R819	24321569	OMF, 5.6 ohm, 1/2W
R820	24366561	CF, 560 ohm
R825	24366472	CF, 4700 ohm
R828	24366339	CF, 3.3 ohm
R830	24310159	OMF, 1.5 ohm, 1/2W
R842	24366681	CF, 680 ohm
R843	24366821	CF, 820 ohm
△ R844	24005007	Metal-Glazed Resistor, 8.2M ohm, 1W
R848	24366392	CF, 3900 ohm
R860	24366561	CF, 560 ohm
R865	24366681	CF, 680 ohm

Location No.	Part No.	Description
R866	24366471	CF, 470 ohm
R867	24366103	CF, 10k ohm
R868	24366472	CF, 4700 ohm
R870	24383103	OMF, 10k ohm, 2W
R871	24366472	CF, 4700 ohm
R872	24510479	Cement, 4.7 ohm, 5W
△ R878	24531270	FR, 27 ohm, 1/2W
R879	24366472	CF, 4700 ohm
△ R884	24531120	FR, 12 ohm, 1/2W
△ R890	24000918	PTC Thermistor, 18 ohm, ±20%, 290V
R893	24366103	CF, 10k ohm
R901	24552272	OMF, 2700 ohm, 1/2W
R902	24552272	OMF, 2700 ohm, 1/2W
R903	24552272	OMF, 2700 ohm, 1/2W
△ R920	24000884	FR, 3 ohm, 1W
RA01	24366103	CF, 10k ohm
RA02	24366103	CF, 10k ohm
RA03	24366103	CF, 10k ohm
RA05	24366103	CF, 10k ohm
RA06	24366103	CF, 10k ohm
RA07	24366472	CF, 4700 ohm
RA09	24019001	MF, 100k ohm, ±1%, 1/4W
RA10	24366102	CF, 1k ohm
RA11	24366223	CF, 22k ohm
RA12	24366473	CF, 47k ohm
RA13	24366471	CF, 470 ohm
RA14	24366471	CF, 470 ohm
RA15	24366471	CF, 470 ohm
RA16	24366103	CF, 10k ohm
RA17	24366471	CF, 470 ohm
RA18	24366471	CF, 470 ohm
RA19	24366332	CF, 3300 ohm
RA20	24366103	CF, 10k ohm
RA21	24366683	CF, 68k ohm
RA24	24366225	CF, 2.2M ohm
RA25	24366333	CF, 33k ohm
RA27	24366333	CF, 33k ohm
RA28	24000245	MF, 33k ohm, ±1%, 1/4W
RA33	24366331	CF, 330 ohm
RA34	24000245	MF, 33k ohm, ±1%, 1/4W
RA35	24366223	CF, 22k ohm
RA36	24366102	CF, 1k ohm
RA64	24366103	CF, 10k ohm
RA65	24366103	CF, 10k ohm
RA66	24366332	CF, 3300 ohm
RA67	24366103	CF, 10k ohm
RA68	24366472	CF, 4700 ohm
RA69	24366103	CF, 10k ohm
RA70	24366332	CF, 3300 ohm
RA71	24366682	CF, 6800 ohm
RA72	24366203	CF, 20k ohm
RA75	24366472	CF, 4700 ohm
RA76	24366102	CF, 1k ohm
RA77	24366103	CF, 10k ohm
RA78	24366102	CF, 1k ohm
RA79	24366471	CF, 470 ohm
RA81	24366471	CF, 470 ohm
RA84	24366102	CF, 1k ohm
RA86	24366103	CF, 10k ohm
RA88	24366103	CF, 10k ohm
RA90	24366103	CF, 10k ohm
RA91	24366102	CF, 1k ohm
RA92	24366473	CF, 47k ohm

Location No.	Part No.	Description
RA96	24366123	CF, 12k ohm
RA97	24366152	CF, 1500 ohm
RA98	24366154	CF, 150k ohm
RA99	24366564	CF, 560k ohm
RE01	24366391	CF, 390 ohm
RN01	24366101	CF, 100 ohm
RN05	24366564	CF, 560k ohm
RN07	24366223	CF, 22k ohm
RV01	24366151	CF, 150 ohm
RV02	24382101	OMF, 100 ohm, 1W
RV03	24552101	OMF, 100 ohm, 1/2W
RV04	24366680	CF, 68 ohm
RV05	24366103	CF, 10k ohm
RV06	24366102	CF, 1k ohm
RV07	24366102	CF, 1k ohm
RV08	24366820	CF, 82 ohm
RV09	24366102	CF, 1k ohm
RV10	24366750	CF, 75 ohm
RV11	24366102	CF, 1k ohm
RV12	24366750	CF, 75 ohm
RV13	24366102	CF, 1k ohm
RV14	24366750	CF, 75 ohm
RV15	24366750	CF, 75 ohm
RV16	24366682	CF, 6800 ohm
RV17	24366102	CF, 1k ohm
RV18	24366152	CF, 1500 ohm
RV19	24366183	CF, 18k ohm
RV22	24366182	CF, 1800 ohm
RV23	24366102	CF, 1k ohm
COILS & TRANSFORMERS		
L101	23238560	Coil, Peaking, TRF4R68AJ
L102	23221803	Coil, Choke, TLN3040D
L103	23262951	Coil, RF Choke, TRF1019
L105	23261986	Coil, RF Choke, TRF9220
L107	23238713	Coil, Peaking, TRF4120AJ
L108	23238715	Coil, Peaking, TRF4829AJ
L311	23103859	Coil (Ferrite Bead), TEM2011
L405	23221739	Coil, Choke, TRF9252D
L406	23103859	Coil (Ferrite Bead), TEM2011
L408	23221722	Coil, Choke, TLN3142D
L410	23289100	Coil, Peaking, TRF4100AF
△L462	-----	DY, Supplied with V901
L590	23289100	Coil, Peaking, TRF4100AF
L811	23103859	Coil (Ferrite Bead), TEM2011
L821	23222694	Coil, Width, TLN2026
L823	23103859	Coil (Ferrite Bead), TEM2011
L826	23222694	Coil, Width, TLN2026
L829	23103859	Coil (Ferrite Bead), TEM2011
L866	23289229	Coil, Peaking, TRF42R2AF
△L901	23200691	Coil, Degaussing, TSB-2229AT
LA01	23262682	Coil, IF, TRF1147T
LA02	23289109	Coil, Peaking, TRF41R0AF
T103	23262813	Coil, IF, TRF1077D
△T401	23224983	Transformer, Horiz. Drive, TLN1039
△T461	23236465	Transformer, Flyback, TFB4124AP
△T801	23211929	Line Filter, TRF3130
△T803	23217240	Transformer, Converter, TPW3301AR
SEMICONDUCTORS		
IC101	23119441	IC, LA7910

Location No.	Part No.	Description
IC102	23904603	IC, TDA3843
IC301	B0377890	IC, TA8403K
IC480	23319201	IC, MC7808CT
IC501	23904604	IC, TDA8362
IC502	23904606	IC, TDA4661
IC601	23119668	IC, TDA2611A
IC602	23318916	IC, MC14053BCP
△IC835	23318299	IC, L78MR05
ICA01	23904850	IC, M37211M2-581
ICA02	23904706	IC, NM24C02EN
ICM01	23904608	IC, TDA8395
ICN01	23319504	IC, MM1031XS
Q104	A6708871	Transistor, 2SC388ATM
Q105	A6708871	Transistor, 2SC388ATM
Q106	23314794	Transistor, 2PC1815Y
Q108	A6002060	Transistor, RN1206
Q109	A6002060	Transistor, RN1206
Q110	23314794	Transistor, 2PC1815Y
Q111	23314794	Transistor, 2PC1815Y
Q112	23314791	Transistor, 2PA1015Y
Q340	23314791	Transistor, 2PA1015Y
Q402	A6330069	Transistor, 2SC2482 FA-1
△Q404	A6871242	Transistor, 2SD1554
Q470	A6547250	Transistor, 2SA1320
Q504	23314791	Transistor, 2PA1015Y
Q505	A6330069	Transistor, 2SC2482 FA-1
Q506	23314791	Transistor, 2PA1015Y
Q507	A6330069	Transistor, 2SC2482 FA-1
Q508	23314791	Transistor, 2PA1015Y
Q509	A6330069	Transistor, 2SC2482 FA-1
Q510	A6330069	Transistor, 2SC2482 FA-1
Q511	23314791	Transistor, 2PA1015Y
Q603	A6342206	Transistor, 2SC2878-A(TE)
Q604	23314791	Transistor, 2PA1015Y
Q606	A6010040	Transistor, RN2004
Q607	23314794	Transistor, 2PC1815Y
Q608	23314794	Transistor, 2PC1815Y
Q609	A6342206	Transistor, 2SC2878-A(TE)
Q610	A6002030	Transistor, RN1203
Q611	A6010040	Transistor, RN2004
Q613	23314794	Transistor, 2PC1815Y
Q801	23314146	IC(STR), STR58041
Q802	A6534145	Transistor, 2SA1020-Y(C)
Q803	A6333346	Transistor, 2SC2655-Y(C)
Q804	23314794	Transistor, 2PC1815Y
Q805	23314794	Transistor, 2PC1815Y
Q806	23314794	Transistor, 2PC1815Y
△Q826	A8643108	IC, Photo Coupler, TLP621(GR-LF)
Q828	23314794	Transistor, 2PC1815Y
Q831	23314794	Transistor, 2PC1815Y
Q836	23314791	Transistor, 2PA1015Y
Q870	A6333346	Transistor, 2SC2655-Y(C)
Q871	23314794	Transistor, 2PC1815Y
QA03	23314794	Transistor, 2PC1815Y
QA04	23314794	Transistor, 2PC1815Y
QA08	23314794	Transistor, 2PC1815Y
QA09	23314794	Transistor, 2PC1815Y
QA25	23314794	Transistor, 2PC1815Y
QV01	23314794	Transistor, 2PC1815Y
QV03	23314791	Transistor, 2PA1015Y
QV05	23314794	Transistor, 2PC1815Y
QV06	23314794	Transistor, 2PC1815Y
QV07	A6002030	Transistor, RN1203

Location No.	Part No.	Description
D101	23115599	Diode, 1N4148
D103	A7288601	Diode, 1S2186 FA-1
D104	A7288601	Diode, 1S2186 FA-1
D105	23316289	Diode, Zener, UZ2.7BSB
D106	A7288601	Diode, 1S2186 FA-1
D107	23115636	Diode, 1SS110
D108	23115878	Diode, Zener, μ PC574J, (L)
D109	23115599	Diode, 1N4148
D110	23115636	Diode, 1SS110
D111	23115599	Diode, 1N4148
D112	23115599	Diode, 1N4148
D201	23115599	Diode, 1N4148
D202	A7150041	Diode, 1SS104
D203	23115599	Diode, 1N4148
D301	23118479	Diode, BYD33J
D302	23118479	Diode, BYD33J
D312	23316794	Diode, SC570A
D340	23316294	Diode, Zener, UZ3.6BSA
D401	23316792	Diode, SC215
D403	23316325	Diode, Zener, UZ9.1BSC
D406	23118479	Diode, BYD33J
D408	23118052	Diode, RU4Z
D410	23316324	Diode, Zener, UZ9.1BSB
D411	23115599	Diode, 1N4148
D471	A7801205	SCR, SF0R3G42
D474	23316342	Diode, Zener, UZ16BSB
D475	23316333	Diode, Zener, UZ12BSB
D501	23316306	Diode, Zener, UZ5.1BSB
D502	23115599	Diode, 1N4148
D591	23316554	Diode, 1SS146
D592	23316554	Diode, 1SS146
D593	23316554	Diode, 1SS146
D594	23115599	Diode, 1N4148
D601	23115599	Diode, 1N4148
D602	23115599	Diode, 1N4148
D603	23115599	Diode, 1N4148
D605	23115599	Diode, 1N4148
D610	23115599	Diode, 1N4148
D801	23118124	Diode, LB-156 (LF-B)
D810	23316339	Diode, Zener, UZ15BSB
D811	23115599	Diode, 1N4148
D812	23118479	Diode, BYD33J
D813	23115599	Diode, 1N4148
D814	23316309	Diode, Zener, UZ5.6BSB
D815	23115599	Diode, 1N4148
D816	23316284	Diode, Zener, UZ2.2BSA
D817	23118479	Diode, BYD33J
D818	23118479	Diode, BYD33J
D819	23316312	Diode, Zener, UZ6.2BSB
D830	23118479	Diode, BYD33J
D832	23118479	Diode, BYD33J
D847	23115599	Diode, 1N4148
D848	23316302	Diode, Zener, UZ4.7BSB
D861	23316306	Diode, Zener, UZ5.1BSB
D870	23115599	Diode, 1N4148
D875	23115599	Diode, 1N4148
D878	23316326	Diode, Zener, UZ10BSA
DA01	23316312	Diode, Zener, UZ6.2BSB
DA02	23115599	Diode, 1N4148
DA03	23115599	Diode, 1N4148
DA32	23115599	Diode, 1N4148
DA99	23115599	Diode, 1N4148
DE50	23358504	Diode (LED), SCL003URC3FX, Red

Location No.	Part No.	Description
DV01	23115599	Diode, 1N4148
DV02	23115599	Diode, 1N4148
DV04	23115599	Diode, 1N4148
DV05	23316302	Diode, Zener, UZ4.7BSB
DV07	23316306	Diode, Zener, UZ5.1BSB
MISCELLANEOUS		
B202	23451654	Holder
△F801	23144898	Fuse, 3.15A
F801A	23165433	Holder, Fuse
△F803	23144876	Fuse, 0.5A
F803A	23165433	Holder, Fuse
K901	23120220	Remote Sensor, IR-9109A-K
P601	23365292	Jack, Earphone, 3.5mm
△P801	23176697	Power Cord
P803	23164725	Plug, 2P
PH01	23365598	21 Pin Connector
PH20	23364692	Jack Phono, 2P
S202	23344333	Switch, Lever, 1C3P
△S801	23145434	Switch, Power, 2C2P
SA01	23145430	Switch, Push, 1C1P
SA02	23145430	Switch, Push, 1C1P
SA03	23145430	Switch, Push, 1C1P
SA04	23145430	Switch, Push, 1C1P
△V901A	23902021	Socket, CRT, 8P
W661	23351079	Speaker, SPK-1351, 77x77mm, 16 ohm
X501	23153360	Crystal, 4.433619MHz
XA01	23153011	Ceramic Resonator, TCR1050
Z101	23303133	Ceramic Filter, 40.4MHz, OFWL9453M
Z102	23303132	Ceramic Filter, 38.9MHz, OFWK2950M
Z103	23107855	Ceramic Filter, 5.5MHz, TCF1031
Z104	23107930	Ceramic Filter, 6.0MHz, TCF1008
Z105	23107911	Ceramic Video Trap, 5.5 to 6MHz, TCF1019
Z106	23107521	Ceramic Video Trap, 6.5MHz, TCF1068
ZA01	24094645	Capacitor Block, 0.01 μ Fx4, 50V
PC BOARD ASSEMBLIES		
U902A	23703128	Main Board, PB4736-1
U902B	23703129	CRT Drive Board, PB4736-2
PICTURE TUBE		
△V901	23312582	Picture Tube, A34EAC01X65
TUNER		
H001	23321067	Tuner, VHF/UHF, EG464X1
ACCESSORIES		
K902	23120954	Remote Hand Unit, CT-9736
AT03	70108832	Battery Cover
Y101	23562107	Owner's Manual, French, 1440RF
Y125	23124935	Antenna, VHF Telescopic
Y145	23293988	Adapter, Aerial Matching

COMBINATION-USE OF PARTS


IMPORTANT: In servicing, always keep the combination-use of parts tabled below.

COMBINATION-USE BY DIFFERENCE OF CRYSTAL (4.43MHz)

	R5		R6	
Location No.	Part No.	Description	Part No.	Description
X501	23153360	Crystal, 4.43MHz (N.D.K.)	23153414	Crystal, 4.43MHz (PHILIPS)
C516	24212561	CD, 560pF	24353221	CD, 220pF

CRT DRIVE BOARD PB4736-2

BOTTOM (FOIL) SIDE

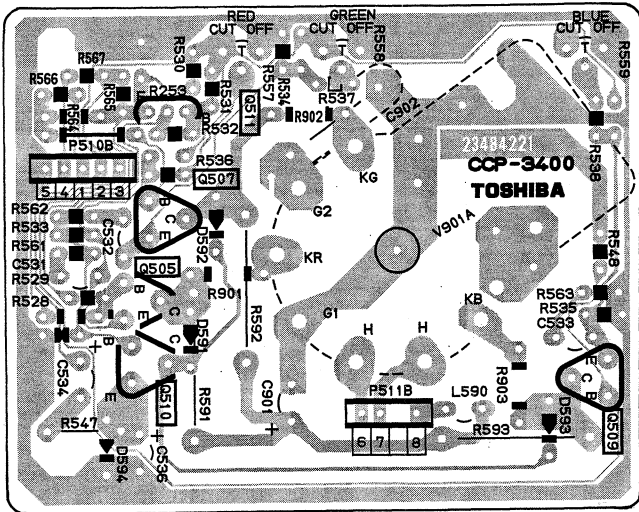

TERMINAL VIEW OF TRANSISTORS


- ① BC327
BC337
BC547A
BC547B
BC547C
BC557A
BC557B
BC556A



- ② 2SK30ATM
2SK117




- ③ BD202




- ④ BF871
2SD553
2SC1569



- ⑤ 2SC3678
2SC3182N




- ⑥ 2SD1427
2SD1432




- ⑦ 2SC2482
2SA1321
2SC2230
2SA1020
2SC2655
2SC752GTM




- ⑧ 2SC388ATM
2SA1015
2SC1959
2SA562TM




- ⑨ 2SD1548



- ⑩ 2SC2023



- ⑪ ON4409



1440RF

SCHEMATIC DIAGRAM

CAUTION: The international hazard symbols "△" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 2. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltage readings were obtained using a high impedance digital voltmeter.
2. (—) or ground lead of instruments should be connected to the ground marked (⊥) in the schematic on checking Non-isolated circuit surrounded by mark but should be connected to the points marked (≡) on checking isolated circuit.
3. The voltage readings may vary as much as $\pm 20\%$.
4. Check that the Tuning, A.F.C., Brightness, Contrast and Colour controls are adjusted for the best picture, making sure that the Contrast, Brightness and Colour controls are set near to their mid-positions.
5. The waveforms were taken using a standard colour bar signal and were observed using a wide band oscilloscope via a low capacity probe.

NOTES:

1. This circuit diagram is subject to change without notice.

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000.
2. Unless otherwise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH , and the values less than 1 in H.


GROUNDING SYMBOL


1. ⊥: Non isolated ground, ≡: Isolated ground.

RESISTOR



Prefixed to

T
Carbo
Oxide l
Ins. Ca
Wire
Cement c
Fusi

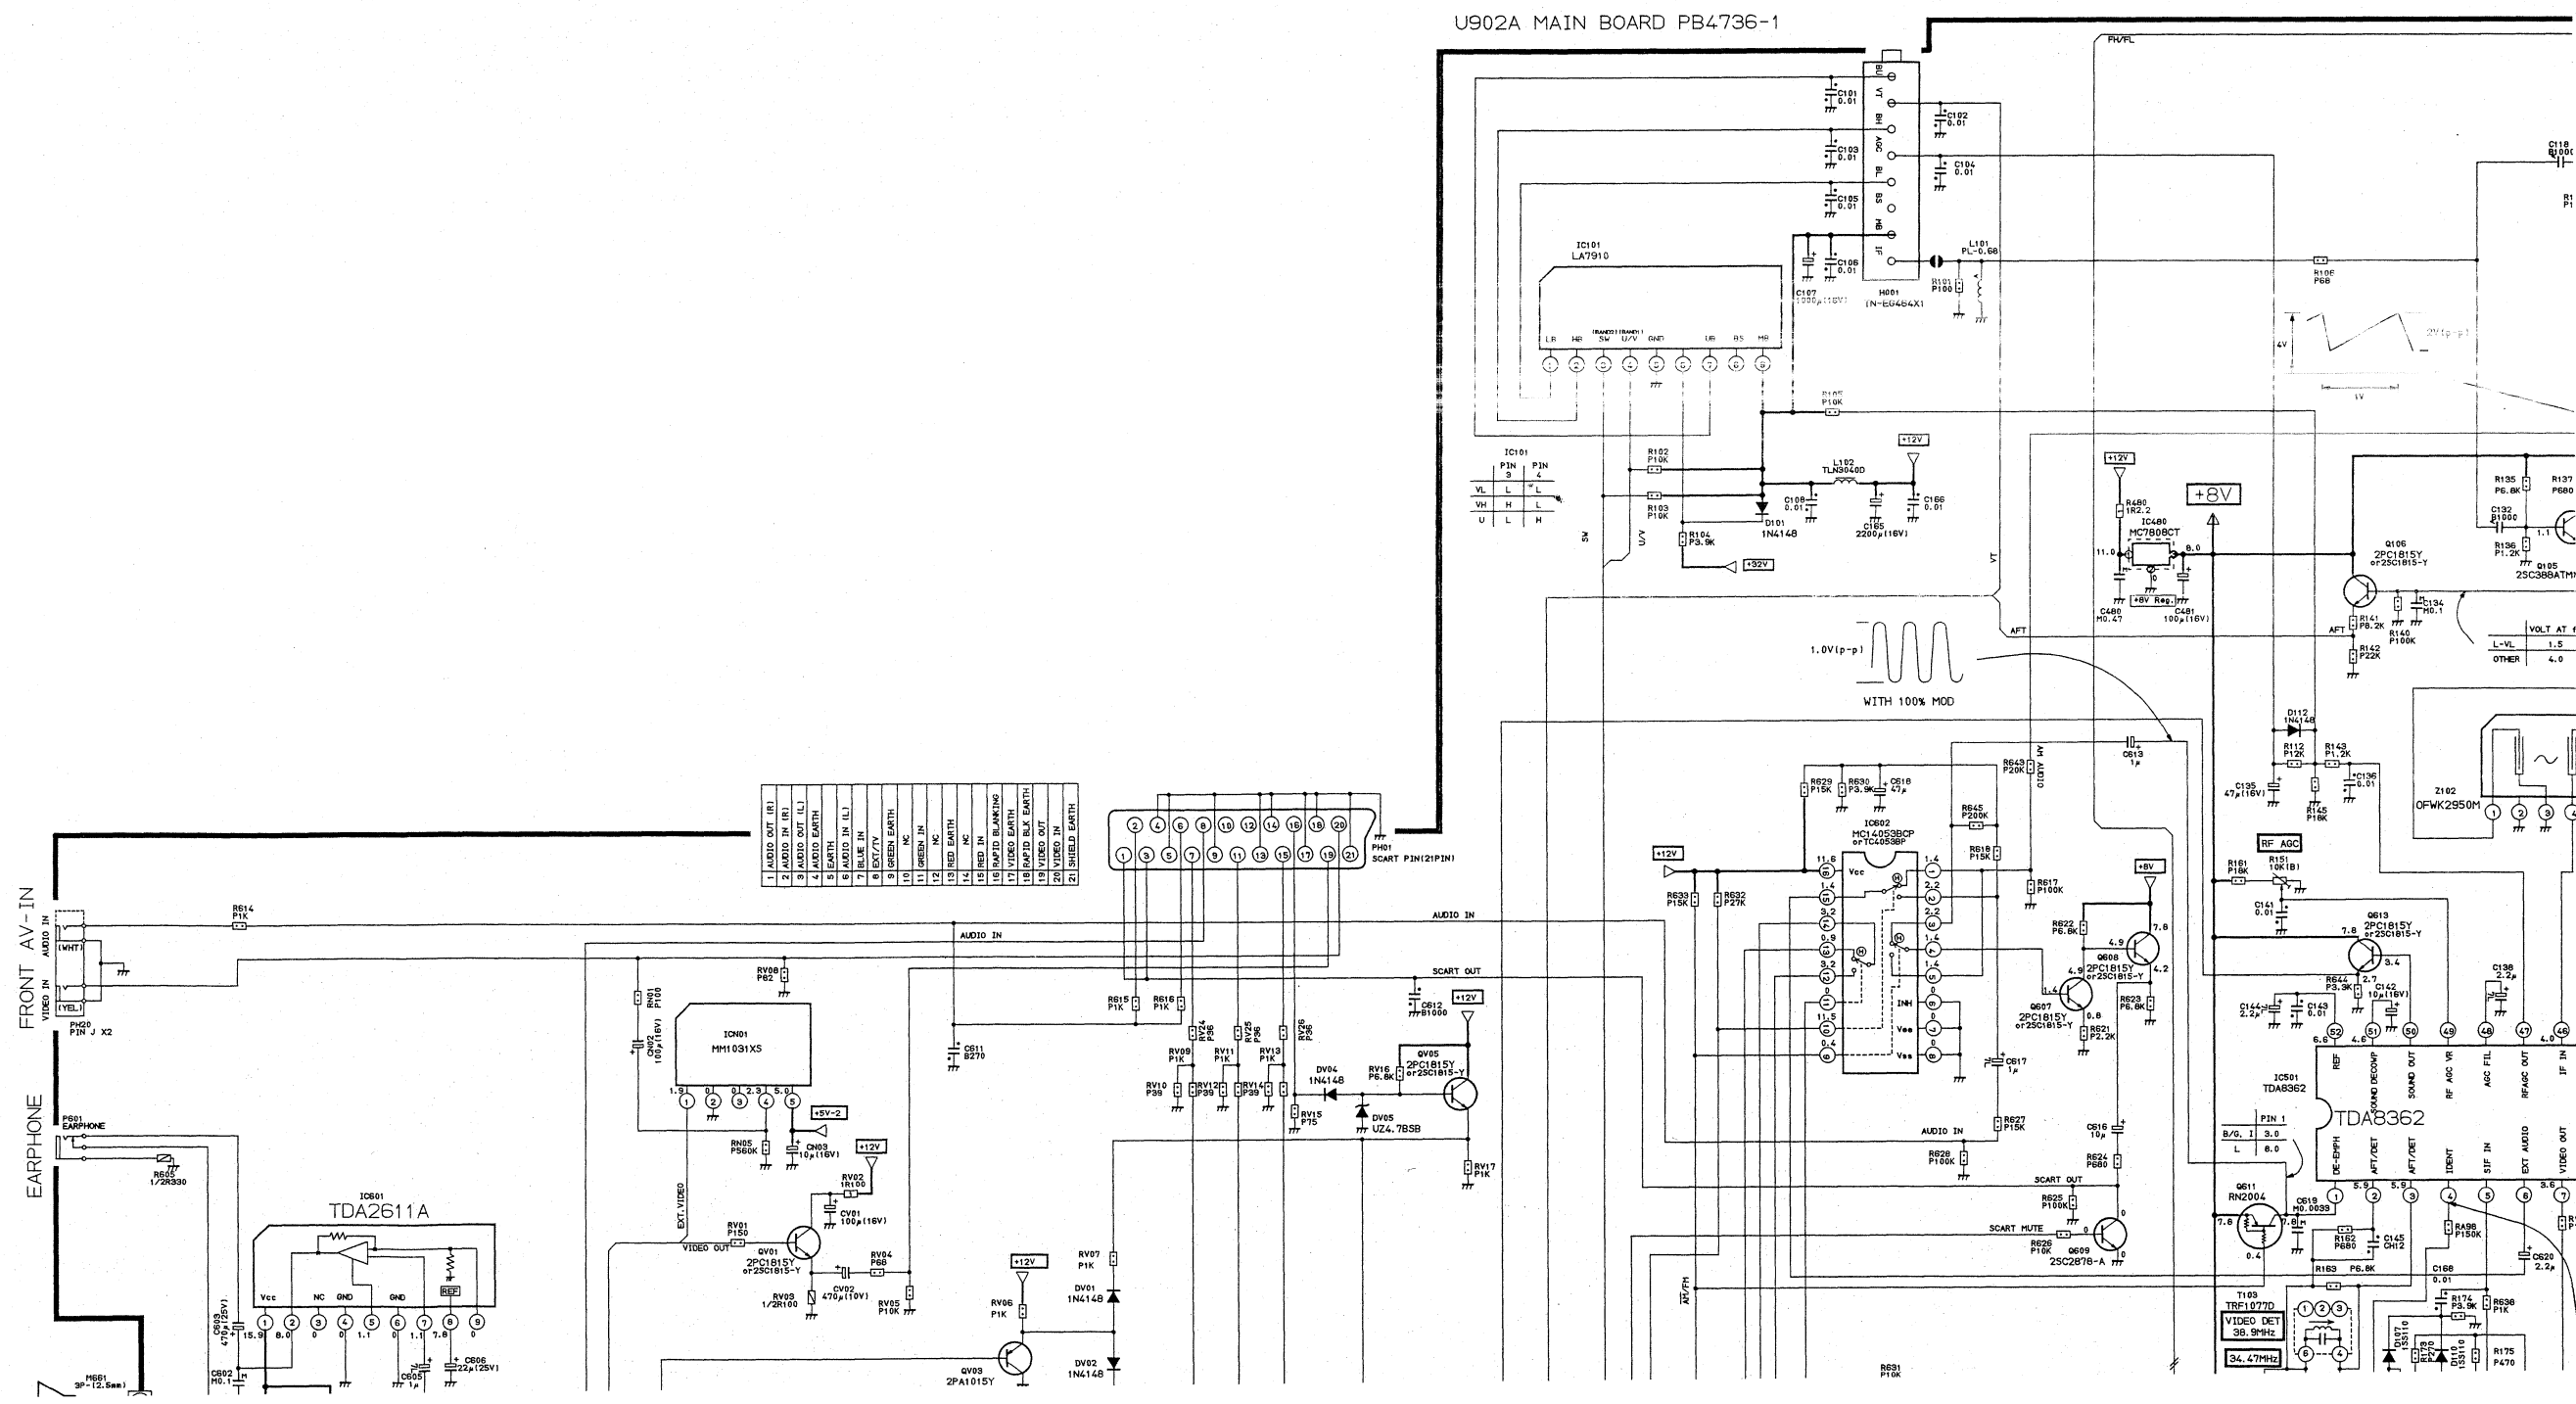

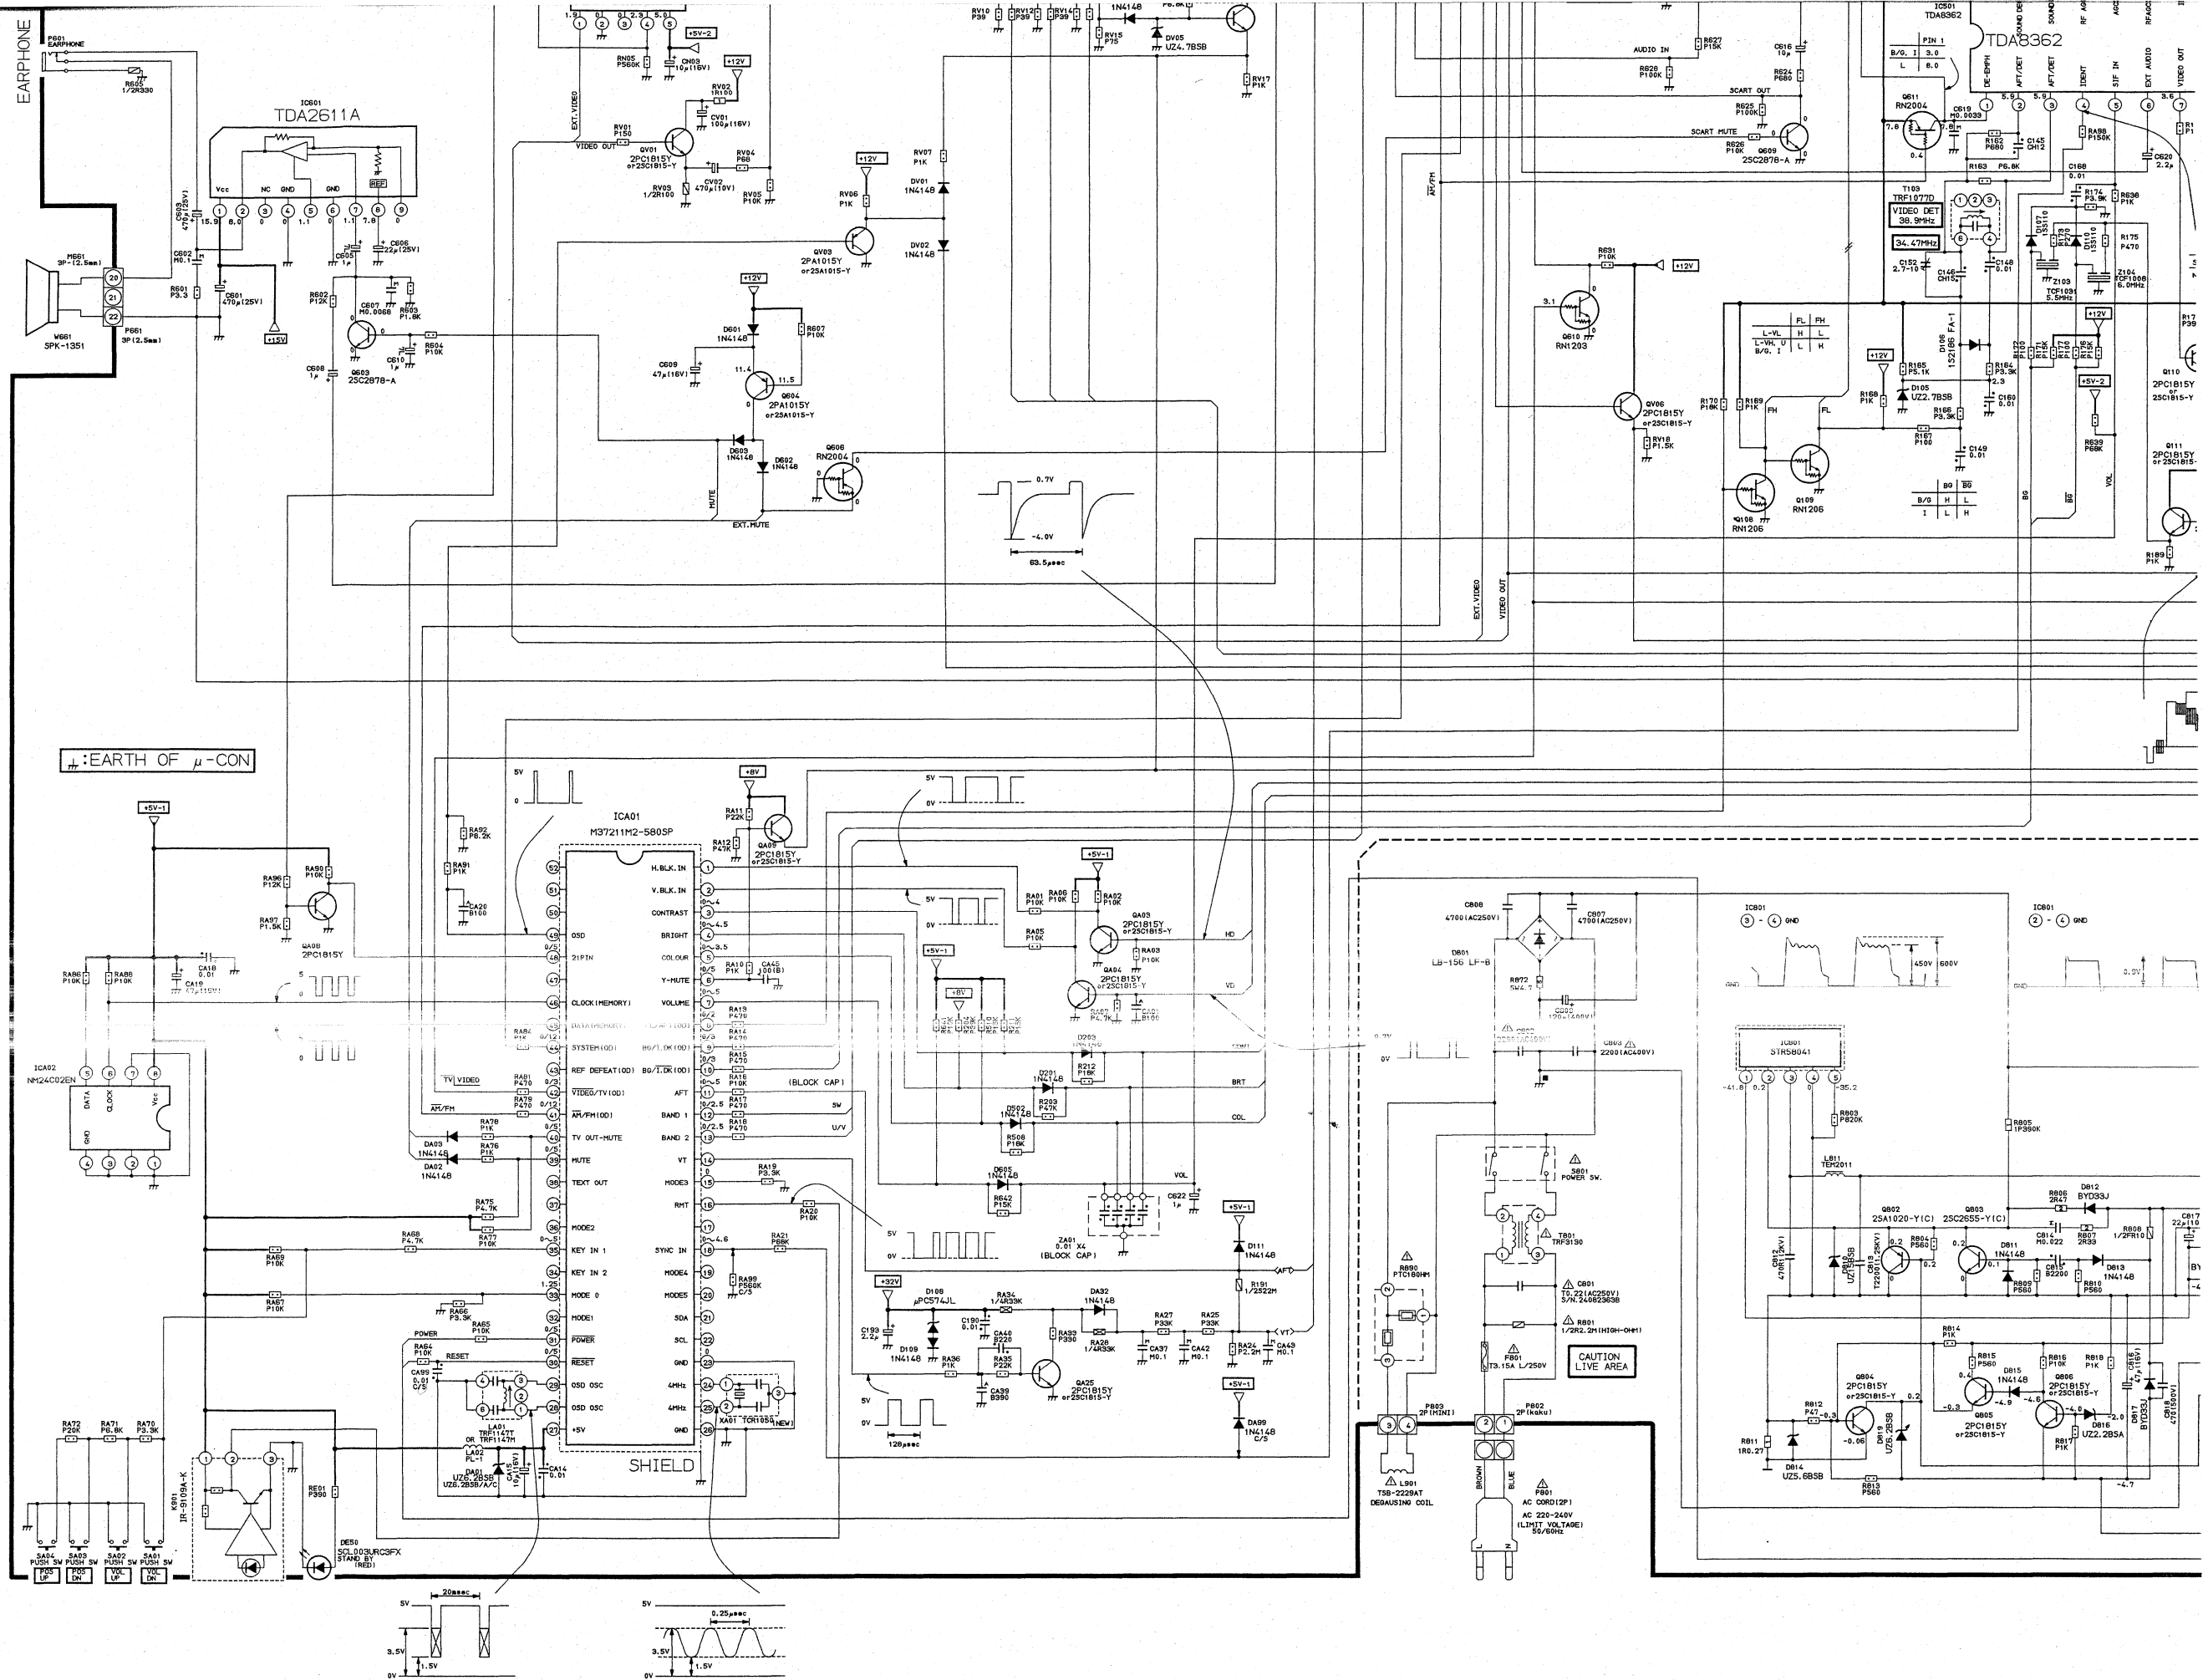

are expressed in
are expressed in

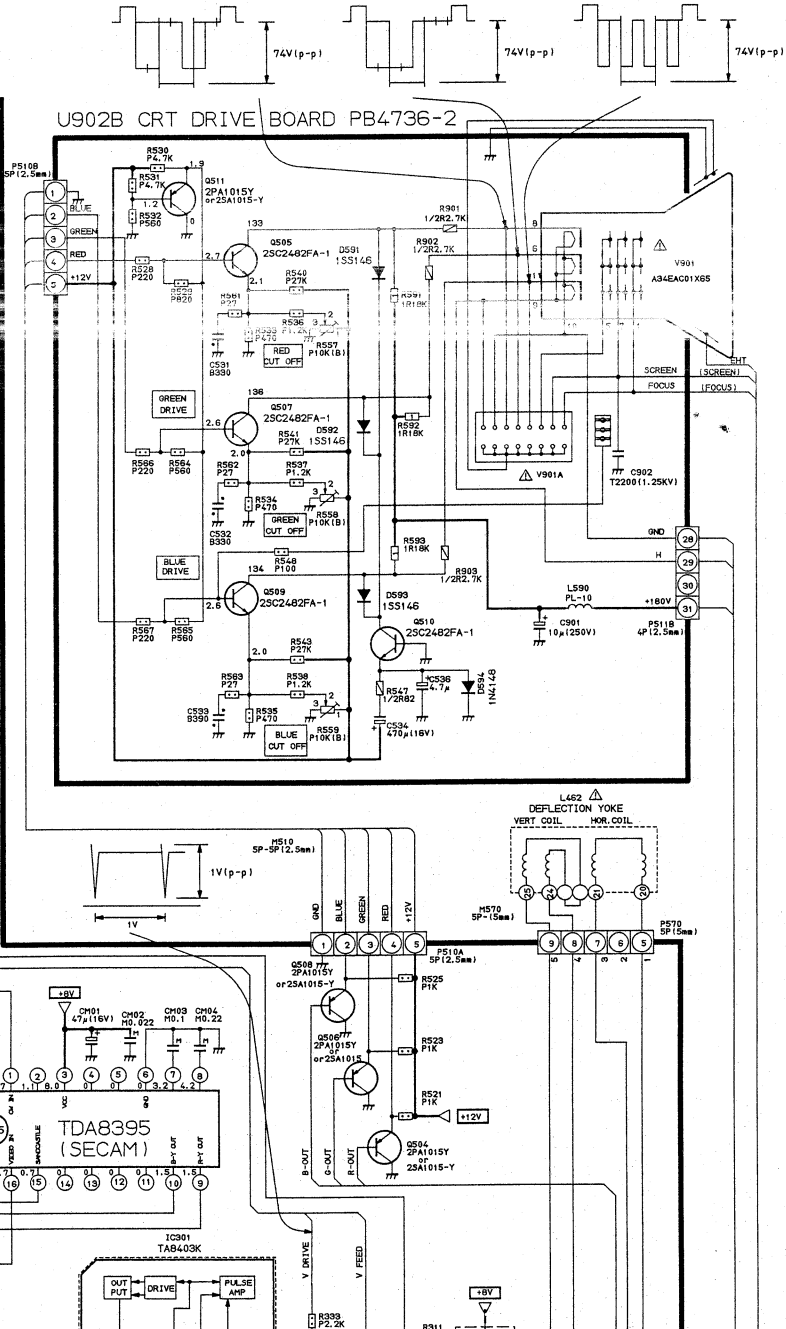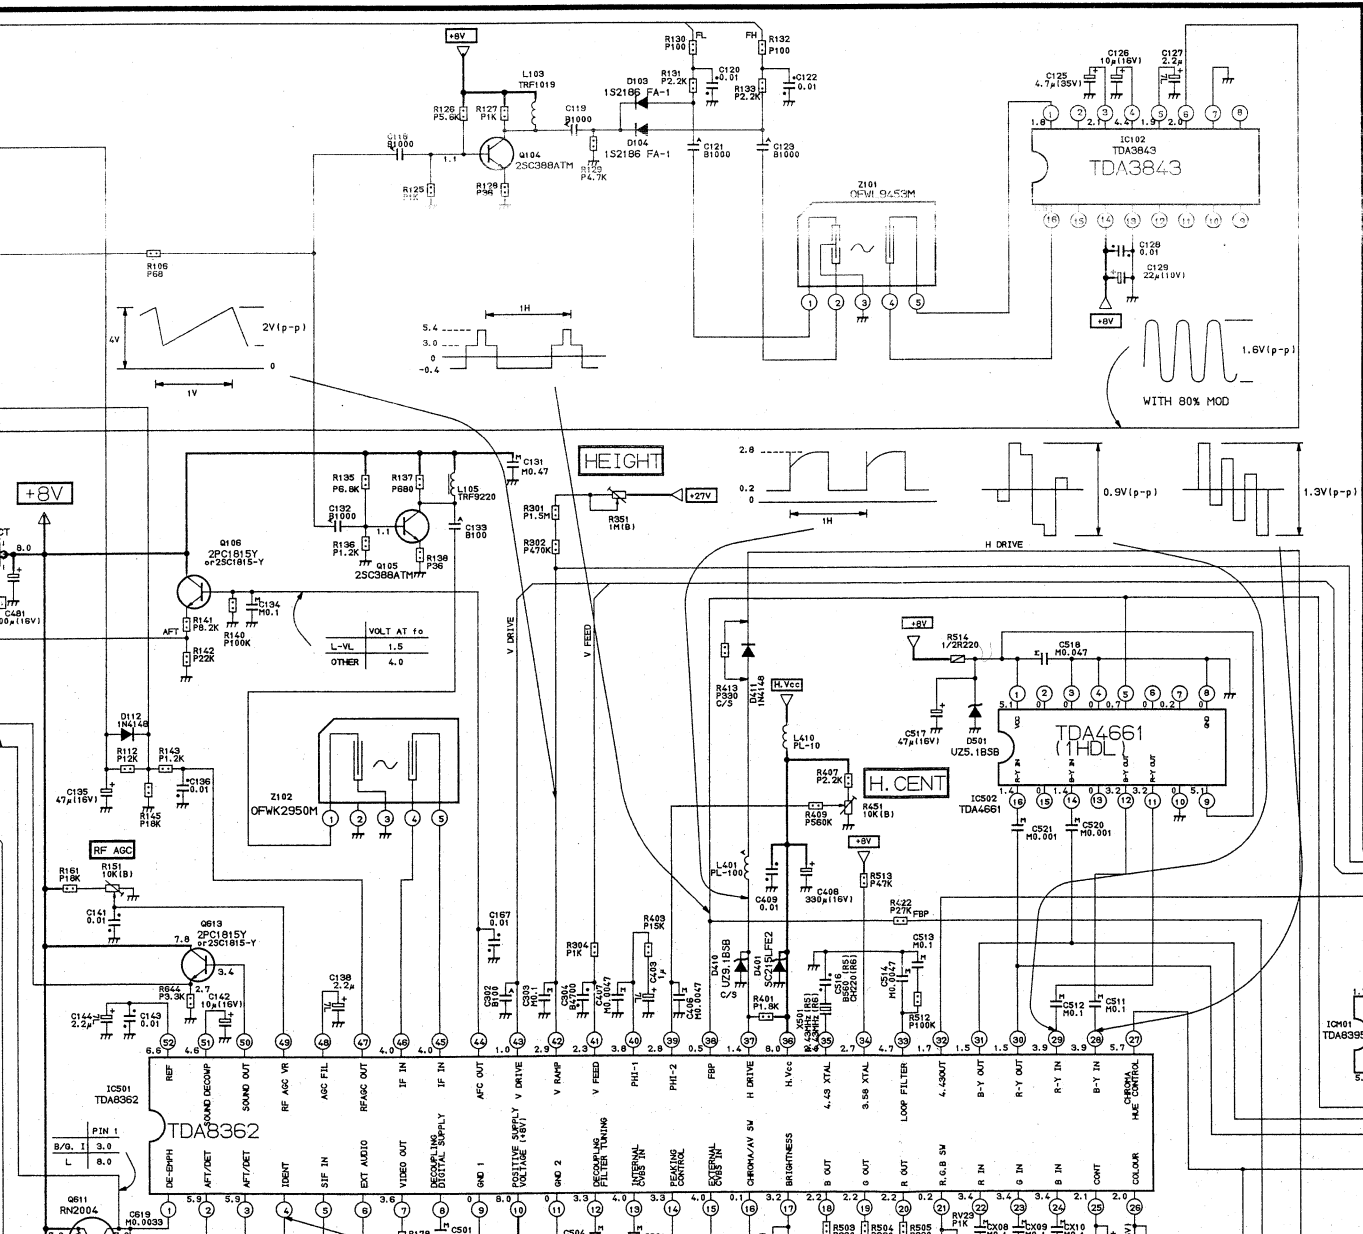

RESISTORS

Prefixed to values:

TYPE	MARK
Carbon Comp.	S
Oxide Metal Film	R
Ins. Carbon Film	P
Wire Wound	W
Cement covered W.W.	NO MARK
Fusible Res.	FR

Suffixes to values:

TOLERANCE	MARK
$\pm 1\%$	(F)
$\pm 2\%$	(G)

Suffixes to VR values:

LAW	MARK
Linear	(B)
'C' Curve Characteristic	(C)

Rating Markings:


WATTAGE	MARK
1/6W	
1/4W	
1/2W	
1W	
2W	

WATTAGE	MARK
3W	
5W	
10W	
15W	
20W	
25W	

CAPACITORS

Rating Markings:

Type	Mark
Ceramic Disc 50V Only	
Electrolytic	
Electrolytic Non-Polar	
Variable Capacitor	
Other	

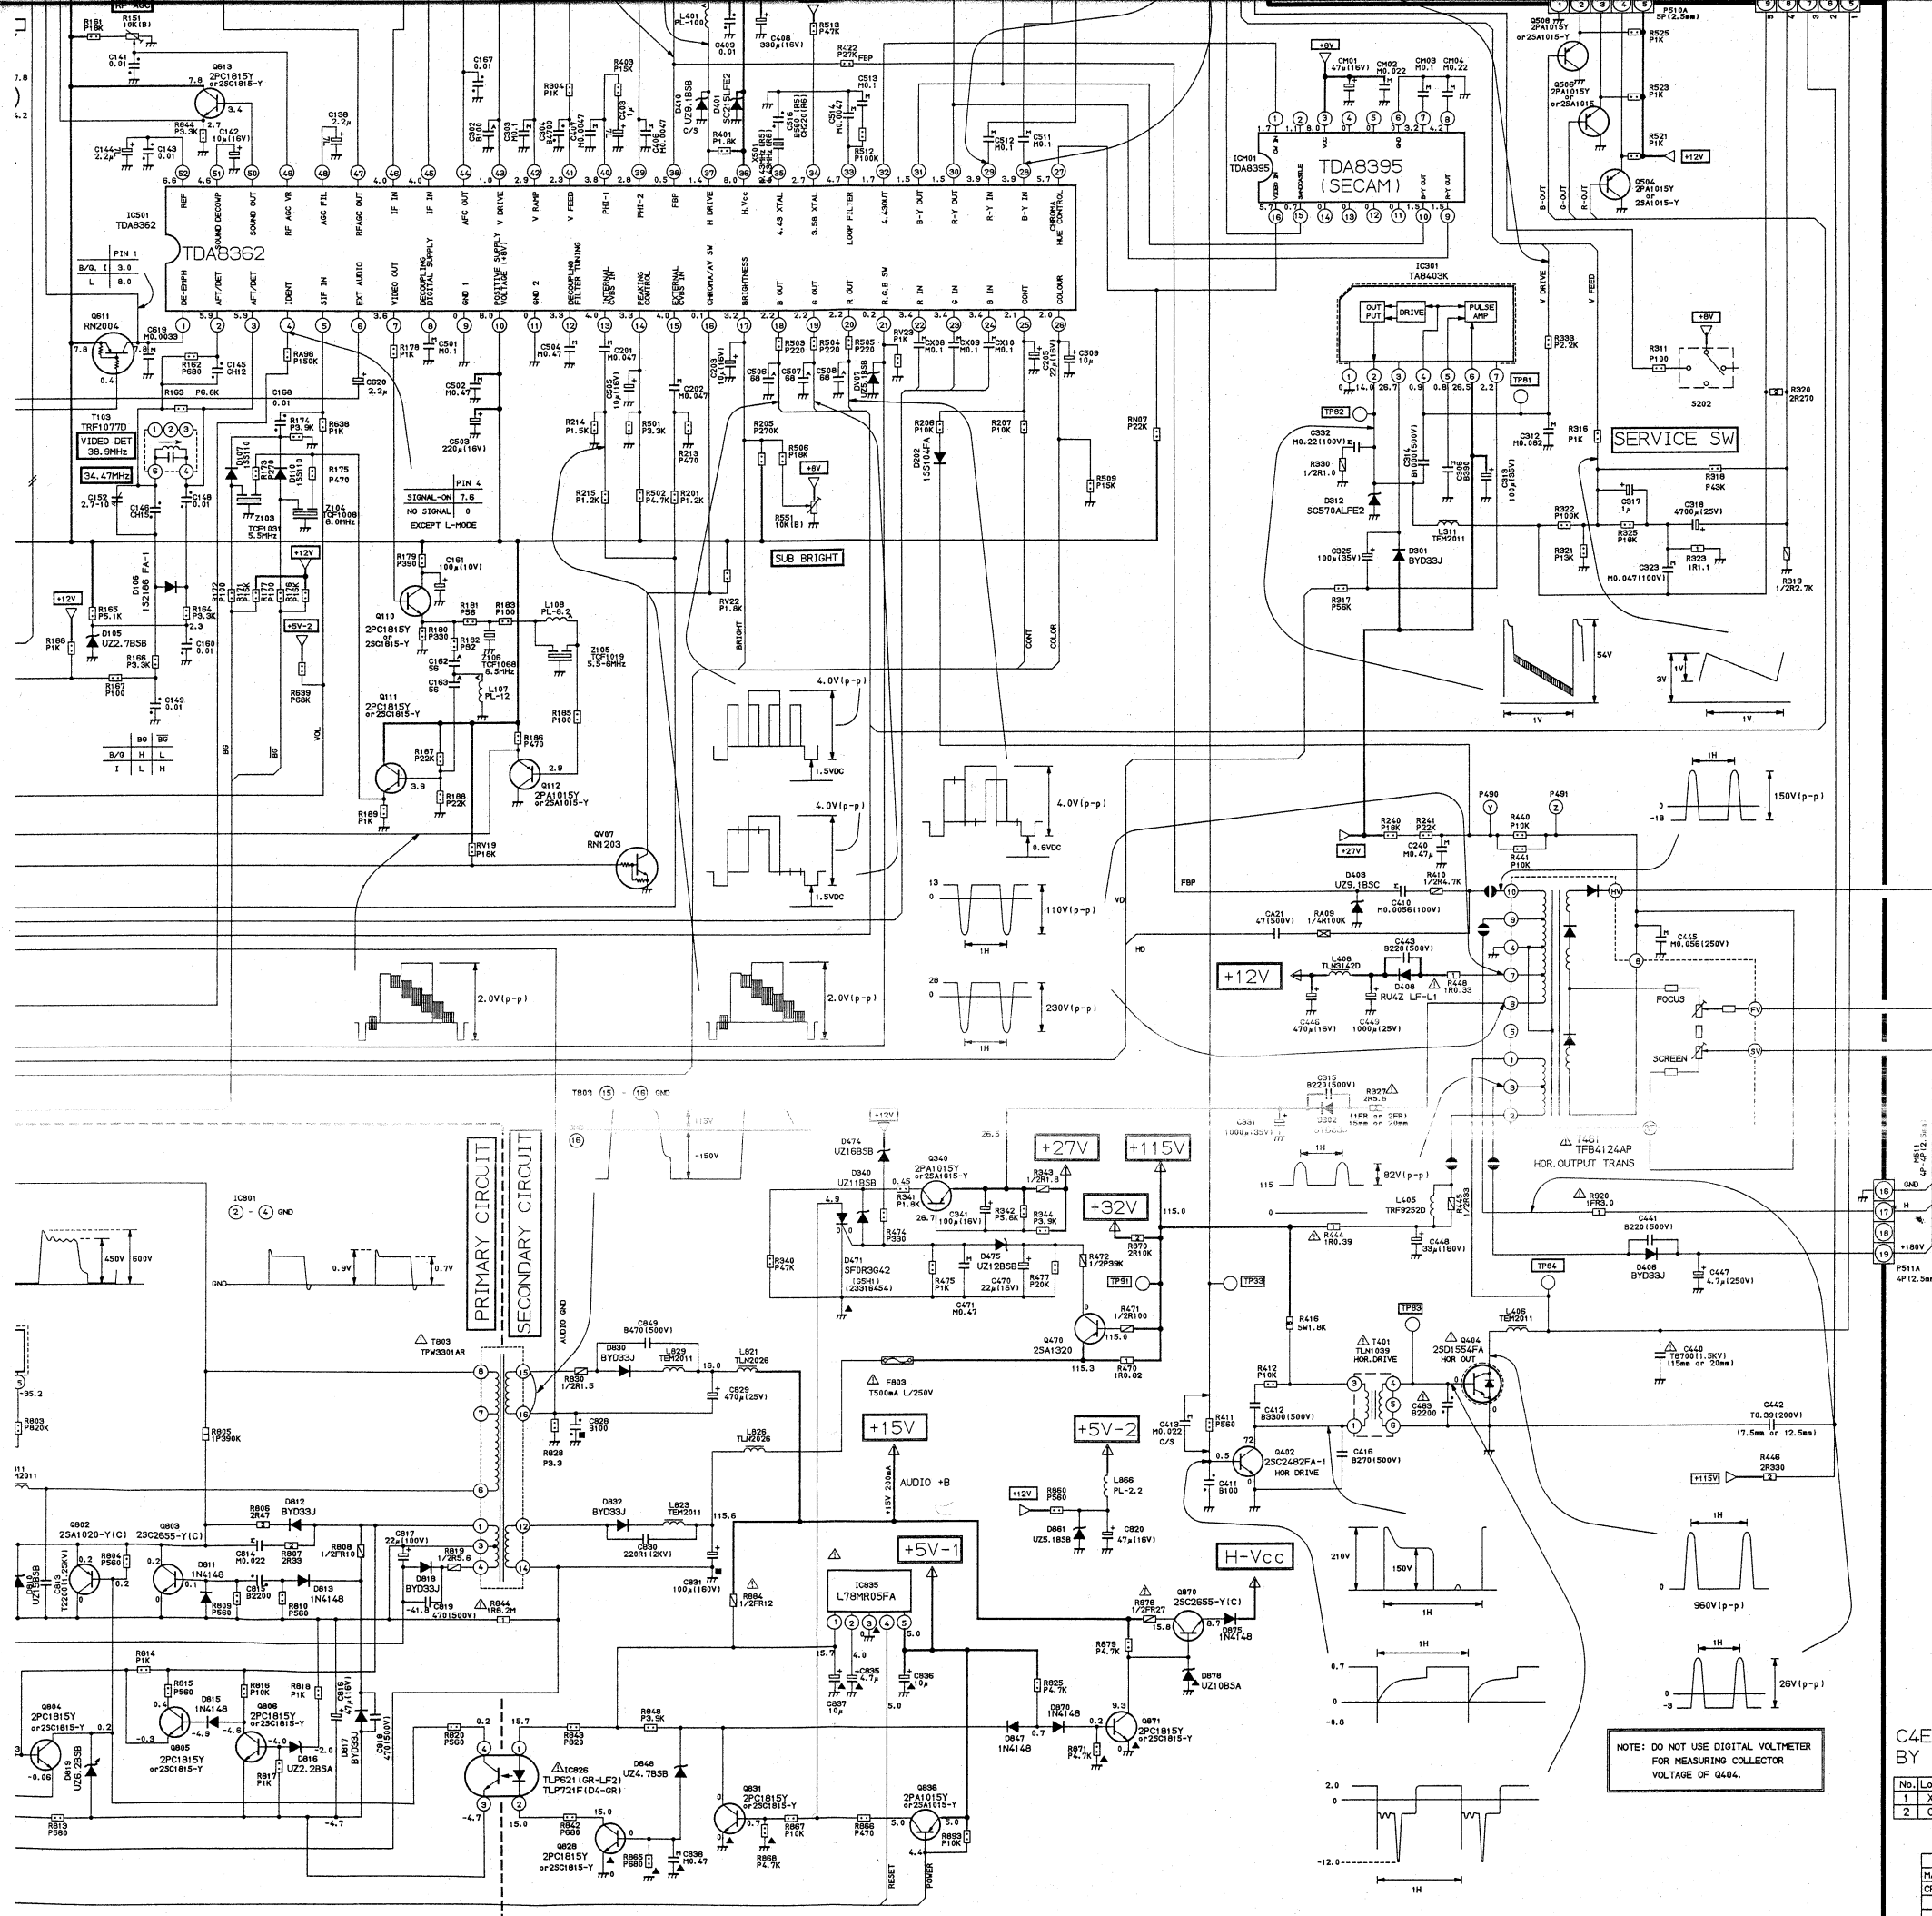

C4E CIRCUIT SPEC COMPONENT VALUES BY CRYSTAL TYPE (SUPPLIER)

No.	Loc. No.	R5	R6
1	X501	4.43MHz (N.D.K.)	4.43MHz (PHILIPS)
2	C516	CD. 560pF	CD. 220pF

UNIT SN.		COPPER SIDE PARTS	
MAIN	SN. 23703128	D410	SN. 23316324
CRT-D	SN. 23703129	DA99	SN. 23115599
		RA99	SN. 24366564
		CA13	SN. 24590220
		RA13	SN. 24336310
		CA99	SN. 24232103A